

### DECORATIVE STITCHING MACHINE 59-83

TYPE 2, 3 & 4

### **PARTS CATALOG**

For Serial Numbers 1409 and up.

FIFTH EDITION JUNE, 1979



APPAREL EQUIPMENT DIVISION
2115 W. Laburnum Avenue, Richmond, Virginia 23227 • 804-355-7961 • Telex: 82-8316
AMF INCORPORATED



### AMF APPAREL EQUIPMENT DIVISION GENERAL OPERATING PRECAUTIONS

Equipment described in this manual has been carefully designed and manufactured to our high quality standards. Special attention has been devoted to convenience of operation while simultaneously providing effective hazard protection for operating personnel.

Any piece of machinery can become dangerous to personnel when improperly operated or poorly maintained. Our service personnel are highly skilled and competent in operation and maintenance of our equipment which is installed under their supervision. A major portion of installation supervision time is devoted to instruction and training of your personnel in the operation and maintenance of this equipment. It is incumbent upon you that all personnel who will be expected to operate or maintain this equipment be required to participate in these training and instruction sessions.

Our Service Department is highly skilled in the operation and maintenance of our equipment. It is recommended that you call on their services on a regular and preferably periodic basis to insure proper maintenance of your equipment, and competent training of your personnel.



#### APPAREL EQUIPMENT

### AMF WARRANTY POLICY ON NEW AND RECONDITIONED EQUIPMENT

What is Covered

90 day warranty on both service and parts due to defects in workmanship or materials.

Warranty period shall begin on completed installation date.

One year warranty on parts. Any part customer feels is defective, customer must return, freight prepaid, to AMF Richmond. Upon receiving the part, AMF will inspect and if the part is found to be defective, it will be replaced at no charge to customer.

What is not Covered

Normal adjustments and routine maintenance will not be covered. This is the sole responsibility of the customer.

Cleaning and lubrication of equipment.

Parts found to be altered, broken or damaged due to neglect or improper installation or application.

Shipping or delivery charges.

#### WHAT TO DO IF THERE IS A QUESTION REGARDING WARRANTY

The satisfaction and goodwill of owners and lessee's of AMF Equipment are of primary concern to AMF Manufacturer's Representatives and AMF Apparel Equipment Division. In the event that a warranty matter is not handled to your satisfaction, the following steps are suggested:

- Discuss the problem with the nearest AMF Manufacturer's Representative.
- 2. Contact the customer Service Manager at the address below:

Apparel Equipment Division AMF Incorporated 2115 W. Laburnum Avenue Richmond, Virginia 23227 Telephone: 804/355-7961



#### APPAREL EQUIPMENT

### MAINTENANCE CHECKS

**CLASS 59 • DIVISION 83** 

To help insure smooth operation of the AMF Decorative Stitching Machine, the following preventative maintenance should be performed daily, weekly and monthly as indicated:

#### Daily

- Clean bottom looper roller, roller must turn freely.
- 2. Remove any thread and lint from thread drum.

#### Weekly

- Clean and oil both needle bars.
- 2. Check for worn, retaining rings and pins.
- Make sure needle stops are clean.
- 4. Make sure needle stop springs are clean and not broken.
- 5. Reset needle release.
- 6. Clean top and bottom loopers, check timing.
- 7. Check belts for proper tension and alignment.
- 8. Check tension finger timing and clean wax from same. Should be polished or replaced if there is a grove or burs.
- 9. Oil machine and grease gears.



This catalog is issued for Stitching Machines Type 2, 3, & 4, Serial No. 1409 & up.

To locate parts - refer to "MECHANISM INDEX" on Page 5B, 5C, or 5D which lists the page numbers for various units - such as Handwheel and Cam Shaft, Clutch, etc. - where the individual parts are illustrated and listed.

Parts are shown in exploded views in the general sequence of assembly with references to assist in locating views of mating parts.

Part numbers are called out numerically where practicable and will be found on the listing page immediately following the illustration on which they appear.

AMF standard and semi-standard stitch parts, also commercial parts, are listed and illustrated in this catalog.

All commercial hardware is illustrated on the proper page of its use and is called out by a rectangular shaped balloon. Using this item number the part number can be found in the "Commercial Parts List", beginning on Page 2000C.

If any item in this catalog is wanted, it may be ordered by specifying the quantity wanted, the part number, description of part, and the serial number of the machine.

Example: 2 parts, 59-83-1041D, Spring, for Serial No. 1419

To expedite shipments - Parts should be listed in consecutive order.

Example: 2 parts, 59-83-1041D, Spring, for Serial No. 1419 1 part, 59-83-1406A3, Cam, for Serial No. 1419

Disregard moulded number on castings as patterns may be used for other parts.

-Model\*- following number indicates part number is incomplete as the parts model due to length of stitch, needle size, etc. Customer should furnish, if possible, the complete number usually stamped on the part being replaced or the incomplete part number, the serial number of the stitching machine and information as requested in notes on pages illustrating the parts.

Individual parts are furnished without screws, nuts, taper pins, cotter pins, dowels, keys, spring post, clamp studs, washers, etc., as these can be transferred in most cases from the part being replaced. Certain parts are furnished without holes, as they must be transferred from parts on the machine.

Parts are shipped F.O.B. our factory. Claims for damage to or loss of express or freight shipments must be filed with local agent. Claims on Insured Parcel Post shipments must be filed through us.



Parts should not be returned without our Return Material Tag. When requesting tags give your order or our invoice number against which parts are shipped. Any material returned without tag will be stored at your risk. All shipments of returned material should be sent to:

PARTS DEPARTMENT APPAREL EQUIPMENT DIVISION AMF INCORPORATED 2115 WEST LABURNUM AVENUE RICHMOND, VIRGINIA 23227

Stitches made on the 59-83 STITCHING MACHINE are:



- Type 2 Machine (identified by serial number with suffix 12, example #1299-12) is used for Saddle Stitch & Short Long Stitch.
- Type 3 Machine (identified by serial number with suffix 11, example #1224-11) is used for Saddle Stitch, Short-Long Stitch & Angle or Pick Stitch.
- Type 4 Machine (identified by serial number with suffix 14, example #1684-14) is used for Saddle Stitch with improved features.



### SCREW TYPES AND SIZES USED ON AMF STITCHING MACHINES

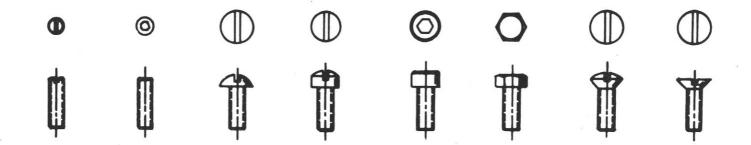


Fig. 1	Fig. 2	Fig. 3 Fig. 4	<u>Fig. 5</u>	Fig. 6	Fig. 7 Fig. 8
Fig. 1	Slotted	Set Screw	Fig. 5	Hexagon	Socket Hd. Cap Screw
Fig. 2	Hexagon	Socket Set Screw	Fig. 6	Hexagon	Head Cap Screw
Fig. 3	Slotted Machine	Round Head Screw	Fig. 7	Slotted Machine	Oval Head Screw
Fig. 4	Slotted Machine	Fillester Head Screw	Fig. 8	Slotted Machine	Flat Head Screw

SIZE	NOMINAL DIA.	THREADS PER INCH
2-56 3-48 4-40 5-40 6-32 6-40 8-32 8-36 10-24 10-32	NOMINAL DIA.  .086" .099" .112" .125" .138" .138" .164" .164" .190"	THREADS PER INCH  56 48 40 40 32 40 32 40 32 40 32 36 24 32
1/4-20 1/4-28 5/16-18 5/16-24	.250" .250" .313" .313"	20 28 18 24



# PARTS CATALOG 59-83 STITCHING MACHINE TYPE 2 SERIAL NUMBER 1409 & UP

MECHANISMS	PAGE NUMBERS
GENERAL ASSEMBLY	10LD,10LD1
	11LA-10,11LA-11,11LB-10,11LB-1 11C-10,11C-11,11C-14 11LC-10,11LC-11,11LC-14
TOOLS & ACCESSORIES	12LB
FRAME & FITTINGS	102LC1.102LC2
HANDWHEEL & CAM SHAFT	104C 104LC
CLUTCH	202D
SHORT & LONG STITCH ATTACHMENT	202LD
•	502LD
MATERIAL FEED	602ID
MATERIAL GUIDE	604E 604LE
PRESSER FOOT	<b>802</b> C 802LC
UPPER LOOPER	1302E
UPPER NEEDLE BAR	
LOWER NEEDLE BAR	
LOWER LOOPER & THREAD DRUM	
THREAD TENSION FINGER	1602LC 1702C1 1702LC1
POSITIVE GRIP THREAD TRANSFER	
	100200

# PARTS CATALOG 59-83 STITCHING MACHINE TYPE 3 SERIAL NUMBER 1409 & UP


MECHANISMS	PAGE NUMBERS
GENERAL ASSEMBLY	10E, 10E1, 10LE, 10LE1
ELECTRICAL	11LA-10,11LA-11,11LB-10,11LB-14 11C-10,11C-11,11C-14
TOOLS & ACCESSORIES	11LC-10,11LC-11,11LC-14 12B, 12LB
FRAME & FITTINGS	102C1,102C2 102LC1, 102LC2
HANDWHEEL & CAM SHAFT	104C, 104LC
CLUTCH	202D, 202LD
ANGLE STITCH FEED ADJUSTER	402C, 402LC
MATERIAL FEED	602D, 602LD
MATERIAL GUIDE	604F, 604LF
ANGLE STITCH MECHANISM	702B, 702LB
PRESSER FOOT & SWIVEL TOE	704C, 704LC
PRESSER FOOT	802C, 802LC
UPPER LOOPER	1302E, 1302LE
UPPER NEEDLE BAR	1502C, 1502LC
LOWER NEEDLE BAR	1504C, 1504LC
LOWER LOOPER & THREAD DRUM	1602C, 1602LC
ANGLE STITCH MECHANISM & THREAD TENSION FINGER	702F, 1702LF

POSITIVE GRIP THREAD TRANSFER .....1802E, 1802LE



# PARTS CATALOG 59-83 STITCHING MACHINE TYPE 4 SERIAL NUMBER 1684 & UP

MECHANISMS	PAGE NUMBER
GENERAL ASSEMBLY	10F,10F1
ELECTRICAL	10LF,10LF1 11A-11,11B-10,11B-14 11LA-11,11LB-10.11LB-14 11C-10,11C-11,11C-14
TOOLS & ACCESSORIES	11LC-10.11LC-11.11LC-14
FRAME & FITTINGS	102C1,102C2 102LC1,102LC2
HANDWHEEL & CAM SHAFT	
CLUTCH	202D 202LD
STITCH FEED ADJUSTMENT	404A 404LA
MATERIAL FEED	
MATERIAL GUIDE	604E
PRESSER FOOT	802C
UPPER LOOPER	1302E
UPPER NEEDLE BAR	
LOWER NEEDLE BAR	
LOWER LOOPER & THREAD DRUM	
THREAD TENSION FINGER	
POSITIVE GRIP THREAD TRANSFER & CLAMP FINGERS	1702LC 1802E 1802LE

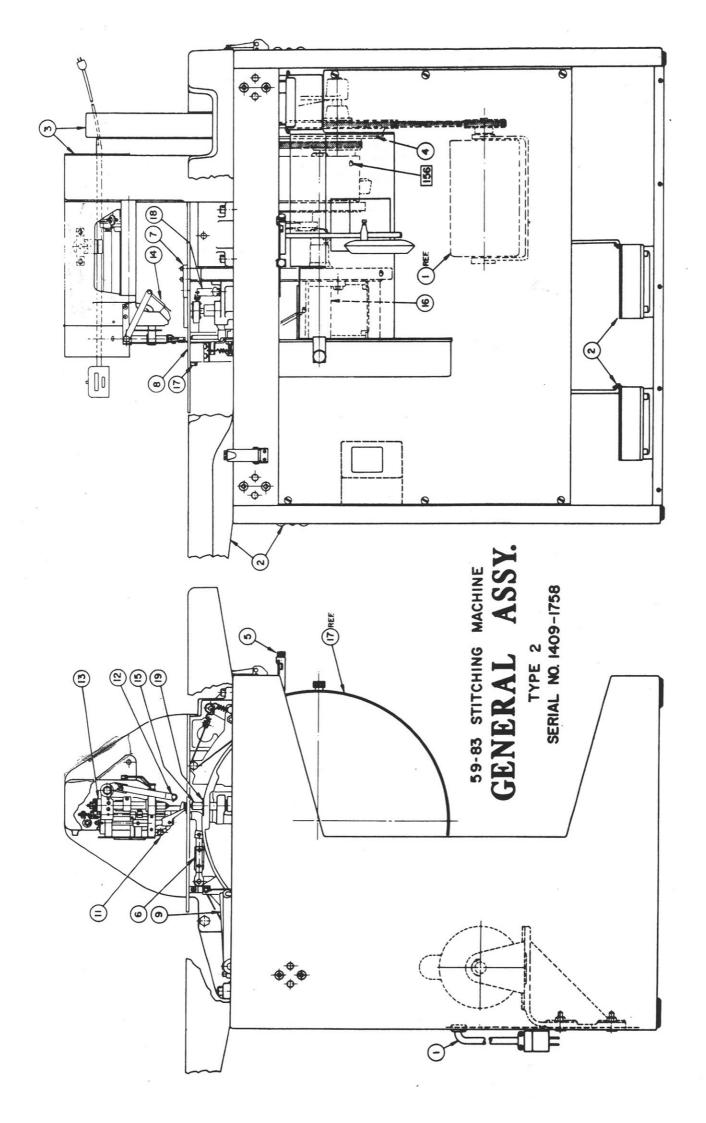




### GENERAL ASSEMBLY TYPE 2 SERIAL NUMBER . 1409 - 1758

# GENERAL ASSEMBLY - TYPE 2 SERIAL NUMBER 1409 - 1758


																	-	
ILLUSTRATED ON PAGE NUMBER	11A-M, 11B-M	102C	104C	202D	502D	602D	604E	604E	802C	1302E	1502C	1502C	1504C	1602C	1602C	1702C1		1802E
DESCRIPTION	Electrical	Frame and Fittings	Handwheel & Cam Shaft	Clutch	Short and Long Stitch Adjustment	Material Feed	Material Guide	Table	Pressure Foot	Upper Looper	Upper Needle Bar	Threader	Lower Needle Bar	Lower Looper	Thread Drum	Thread Tension Finger	Positive Grip Thread Transfer and	Clamp Finger
ITEM NO.	-	2	က	4	2	9	7	<b>∞</b>	11	12	13	14	15	16	17	18	19	

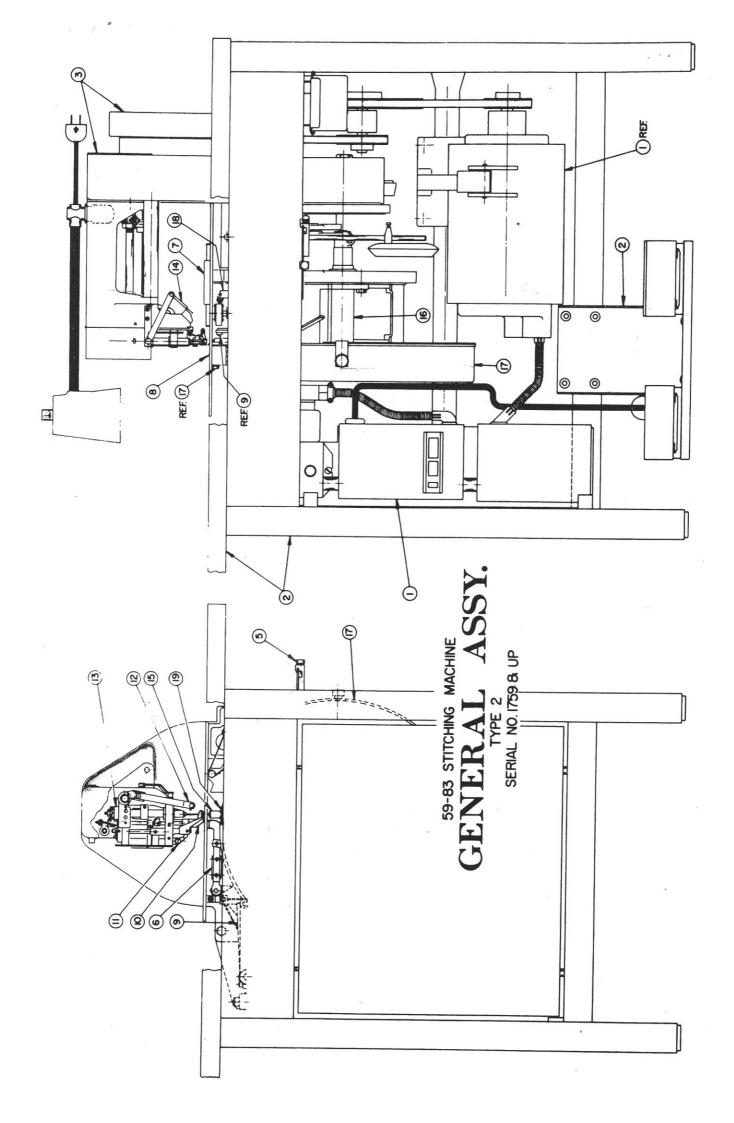



# GENERAL ASSEMBLY TYPE 2 SERIAL NUMBER 1759 & UP


ITEM NO.	DESCRIPTION	ILLUSTRATED ON PAGE NUMBER
1 2 3	Electrical Frame & Fittings Handwheel & Cam Shaft	11C-M 102C2 104C
5 6 7 8	Short & Long Stitch Attachment Material Feed Material Guide Table	502D 602D1 604E 604E
11 12 13 14 15 16 17 18	Pressure Foot Upper Looper Upper Needle Bar Threader Lower Needle Bar Lower Looper Thread Drum Thread Tension Finger Positive Grip Thread Transfer and Clamp Finger	802C 1302E 1502C 1502C 1504C 1602C 1702E1 1802E

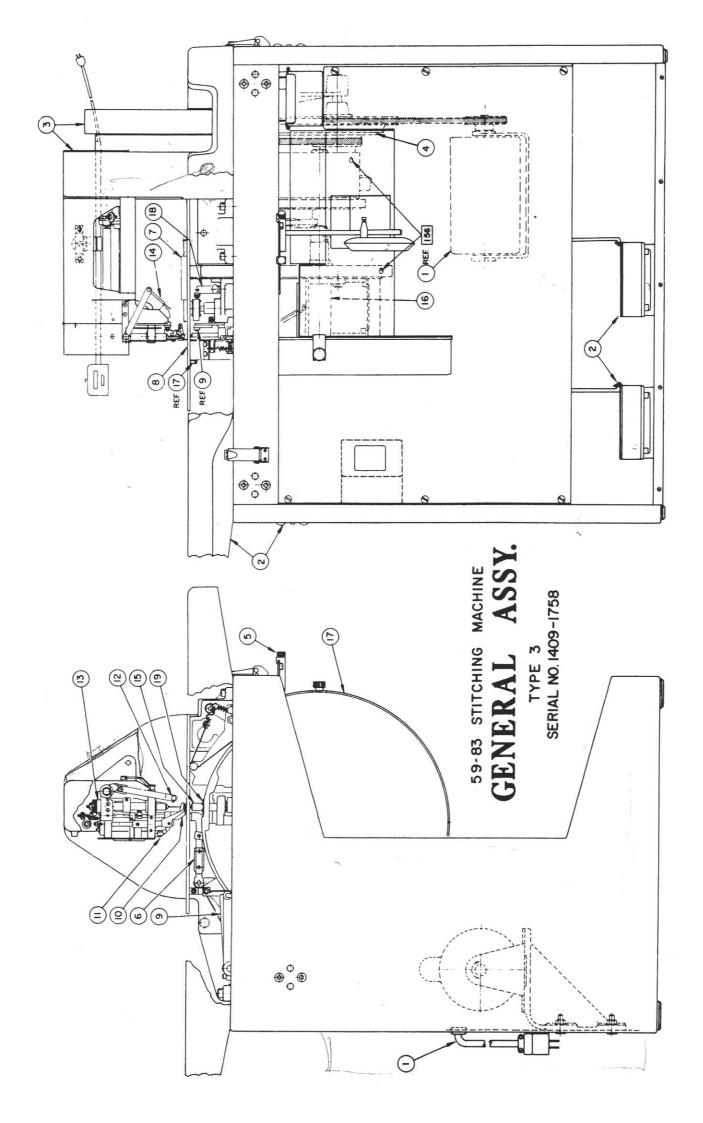



### GENERAL ASSEMBLY TYPE 3 SERIAL NUMBER 1409 - 1758


#### ILLUSTRATED ON PAGE NUMBER 11A-M, 11B-M 1504C .602C 502C 1302E 1502C 1702F 1802E 104C 202D 602D 604F 604F 702B 704C 802C 402C Clamp Finger..... GENERAL ASSEMBLY - TYPE Positive Grip Thread Transfer and Angle Stitch Feed Adjuster ..... 1409 Handwheel & Cam Shaft..... Material Guide..... Angle Stitch Mechanism..... Thread Tension Finger ..... Lower Needle Bar..... Electrical..... Thread Drum..... Pressure Foot & Swivel Toe Angle Stitch Mechanism and SERIAL NUMBER DESCRIPTION Upper Needle Bar.... Frame and Fittings Pressure Foot ... Material Feed Lower Looper Upper Looper Threader Clutch Table NO. 19

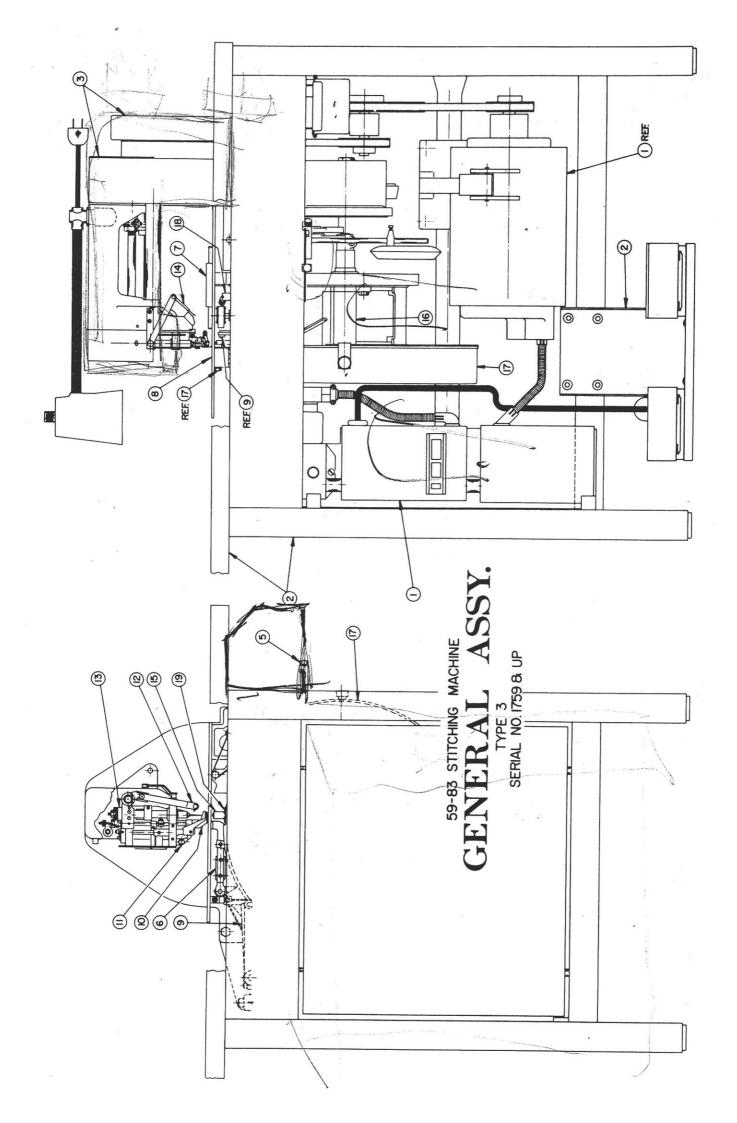



### GENERAL ASSEMBLY TYPE 3 SERIAL NUMBER 1759 & UP


ITEM NO.	0300	DESCRIPTION	ILLUSTREATED PAGE NUMBER	ON
1 2 3		Electrical		
2		Frame & Fittings	102C2	
, 3		Handwheel & Cam Shaft	104C	
5		Angle Stitch Feed Adjuster	402C -	
. 6	ı.r	Material Feed	602D -	
7		Material Feed Material Guide Table Angle Stitch Mechanism Pressure Foot & Swivel Toe	604F	
8		Table	604F -	
, 9	ť.	Angle Stitch Mechanism	702B -	
10		Pressure Foot & Swivel Toe	704C -	
11		Pressure Foot	802C	
12		Upper Looper	1302E	
13		Upper Needle Bar	1502C	
14		Threader	1502C	
15		Lower Needle Bar	1504C	
16		Lower Looper		
17		Thread Drum	1602C -	
18		Angle Stitch Mechanism and	,	
WARRY STORY		Thread Tension Finger	1704F	
19		Positive Grip Thread Transfer and		
		Clamp Finger	1802E	

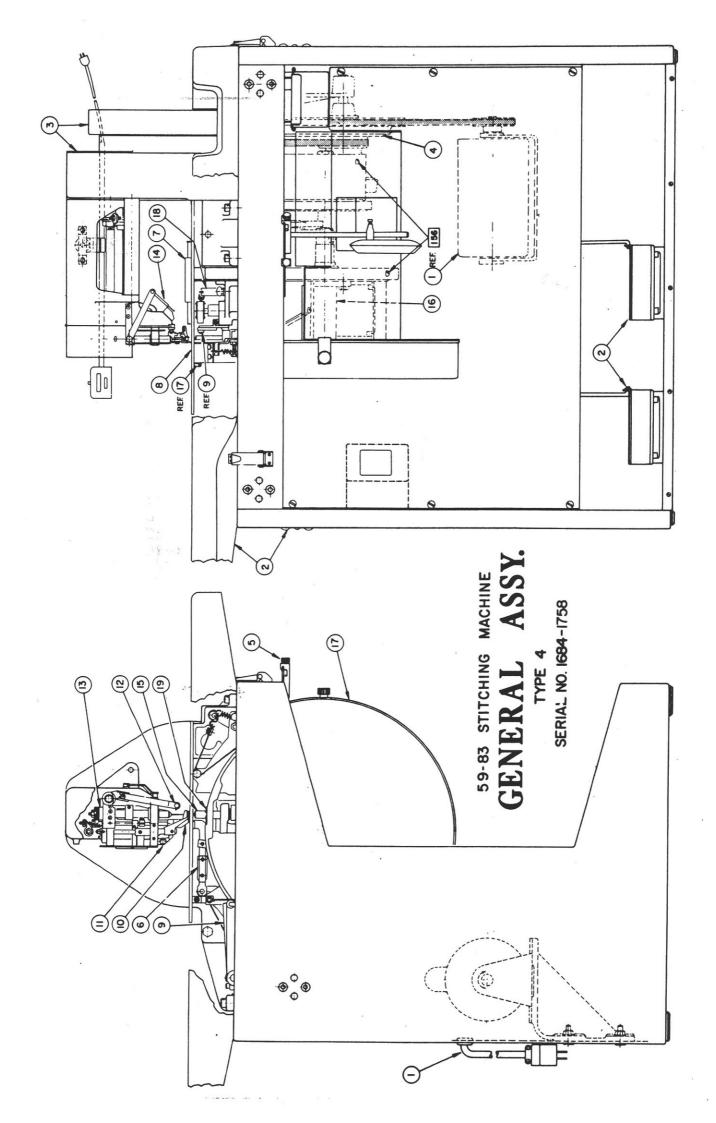



### GENERAL ASSEMBLY TYPE 4 SERIAL NUMBER 1684 - 1758


PAGE NUMBER	И. 11В-М		ei () ()	E) E) E) E) — (c)
PAGE	11A-M. 102C 104C 202D	404A 602E 604E 604E	802C 1302E 1502C 1502C	1504C 1602C 1602C 1702C
DESCRIPTION	Electrical Frame and Fittings. Handwheel & Cam Shaft.	Material Feed	Pressure Foot Upper Looper Upper Needle Bar Threader.	Lower Needle Bar.  Lower Looper.  Thread Drum  Thread Tension Finger.  Fositive Grip Thread Transfer  & Clamp Finger
NO.	10 m 4. n	00/0	11 12 13	0 9 5 4 5 5 10 9 5 4 5 5 5

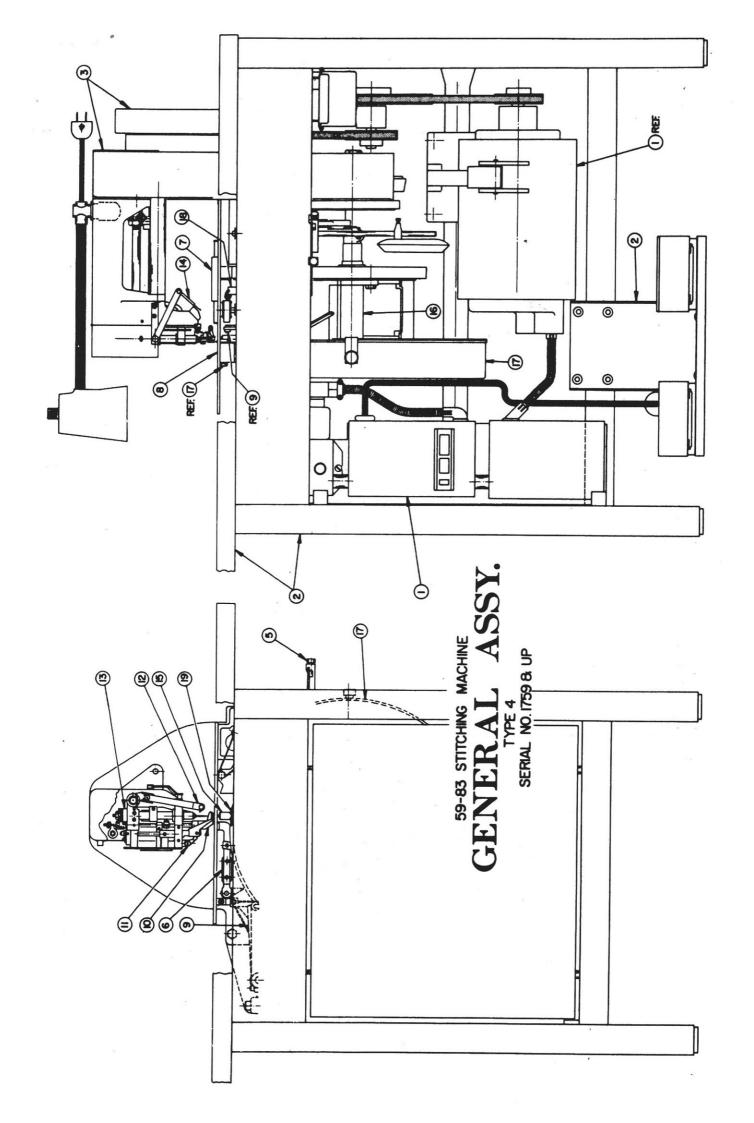



# GENERAL ASSEMBLY TYPE 4 SERIAL NUMBER 1759 & UP

ITEM NO.	DESCRIPTION	ILLUSTRATED ON PAGE NUMBER
1 2 3	Electrical Frame & Fittings Handwheel & Cam Shaft	102C2
5 6 7 8	Stitch Feed Adjustment  Material Feed Material Guide  Table	602F -
11 12 13 14 15 16 17 18 19	Pressure Foot Upper Looper Upper Needle Bar Threader Lower Needle Bar Lower Looper Thread Drum Thread Tension Finger Positive Grip Thread Transfer and Clamp Finger	1302E - 1502C - 1502C - 1504C - 1602C -

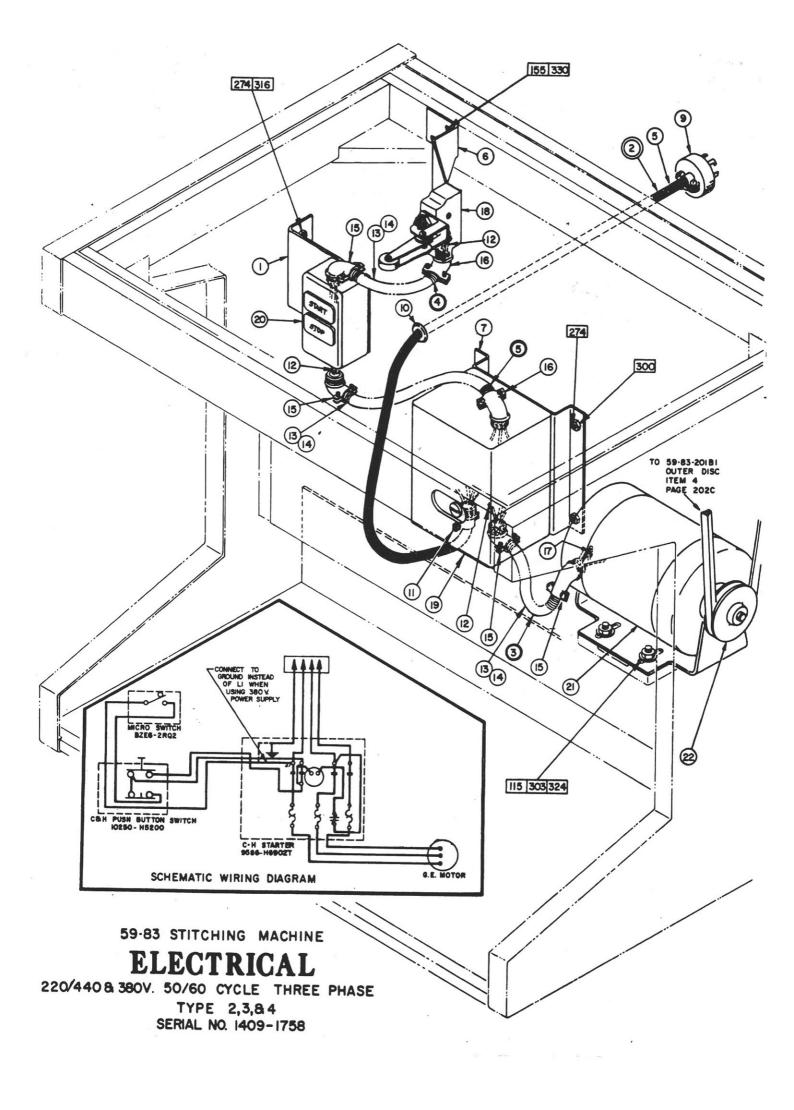




# ELECTRICAL 220/440 & 380 VOLTS - 50/60 CYCLE 3 PH. TYPE 2, 3, & 4 SERIAL NO. 1409-1758

NO.	DESCRIPTION	PART NUMBER
1 2 3 4	Mounting Bracket	59-83-3029B2 59-83-3031A-11 59-83-3031C1-11 59-83-3040A-11
5 6 7	Starter Cable (See Note #3)	59-83-3040B 59-83-3040F 59-83-3041A
8 9 10	G. E. Rubber Cord	Type SO #14-4 Cond. #9967 #SB-875-10
11 12 13	T & B Squeeze Conn. Solid Black Wire Flex. Steel Conduit	#3302 #14 Type "T"
14 15 16	Anti-Short Bushing	3/8" #2 #265
17 18 19	T & B Squeeze Conn	#266 #74B #BZE6-2RQ2
20 21	C-H Magnetic Starter C-H Push Button Switch	#9586-H6902T #10250-H5200
22	T 000 / / / /	#5K36EG513 #5K36GG566 #AS-34 Type 1F
Notes:		
(e)	#1 - Item #2 consists of Items 8, 9, 10, #2 - Item #3 consists of Items 12, 13. 1 #3 - Items # 4 & 5 consists of Items 12.	4, 16, & 17,


#3 - Items # 4 & 5 consists of Items 12, 13, 14, 15, & 16

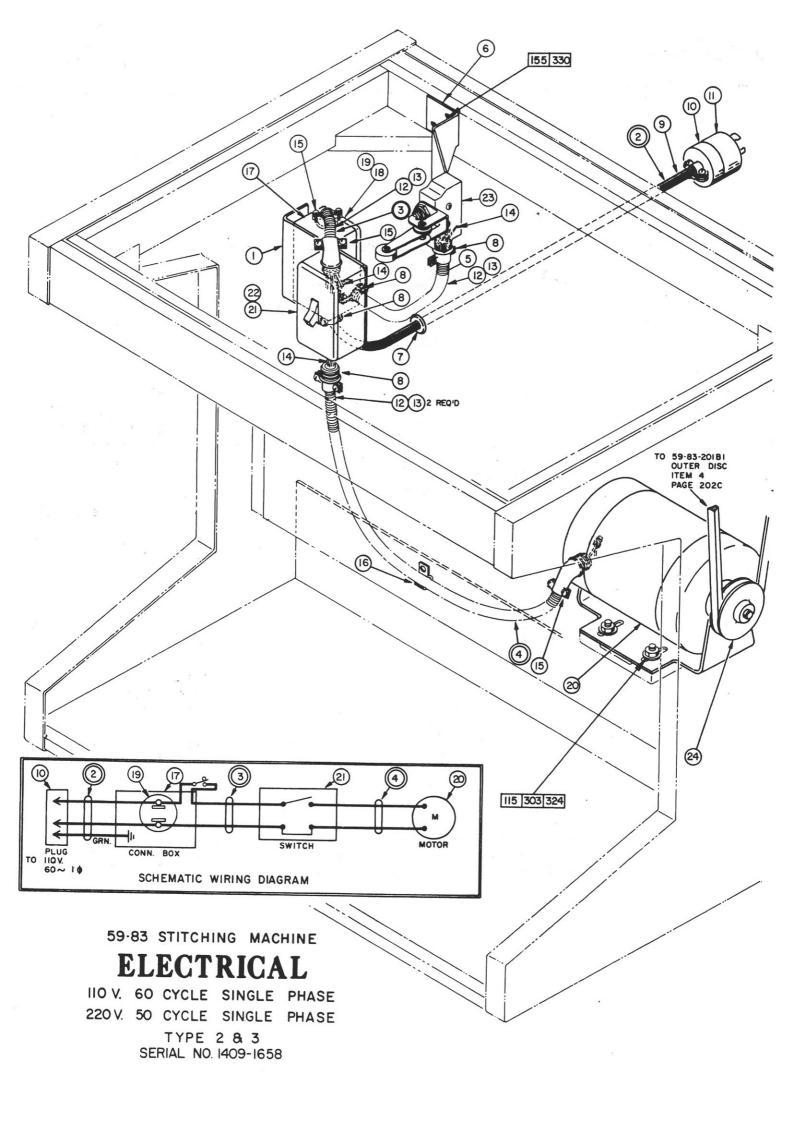



# ELECTRICAL 110 VOLTS - 60 CYC. - 1 PH. 220 VOLTS - 50 CYC. - 1 PH. TYPE 2 & 3 SERIAL NO. 1409 - 1658

ITEM		
NO.	DESCRIPTION	PART NUMBER
	Starter Cable (See Note #2)	59-83-3031A-10 .59-83-3031B-10 59-83-3040A-1 59-83-3040F SB-875-6 #3302 .#SJO-16 #5264 .#5273L 3/8" .#2 #14 Type "T" .#266 #7145 .4CS-½ #2539 .#7590 #5KC36GG113 .#5KC37KG308 #CR101-Y1 .CR123H4.10A CR123H2.05A
Note #	fl - Item #2 consists of Items 7,8,9,10,	& 11.
Note #	2 - Item #3 consists of Items 12,13,14,&	15.
Note #	#3 - Item #4 consists of Items 8,12,13,14	, & 15.
Note #	44 - Item #5 consists of Items 8,12,13, &	14.

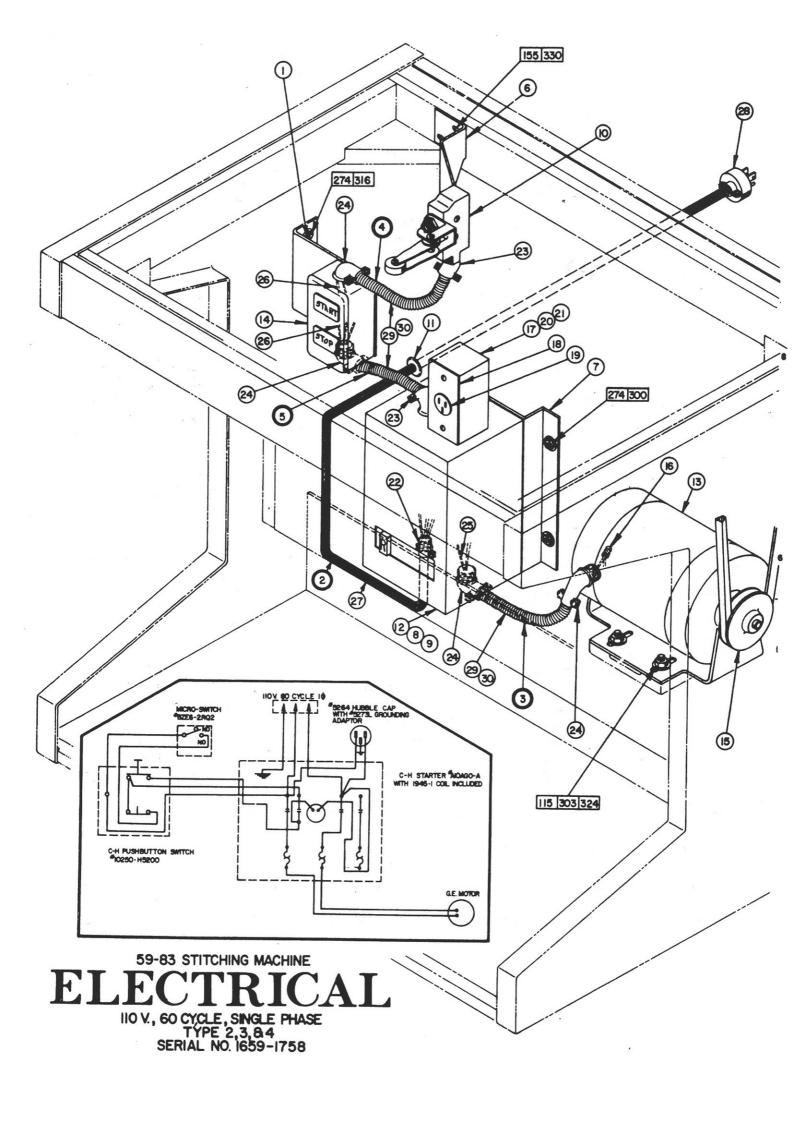




# ELECTRICAL 110 VOLTS - 60 CYCLE - SINGLE PHASE TYPE 2, 3 & 4 SERIAL NO. 1659-1758

ITEM		
NO.	DESCRIPTION	PART NUMBER
1	Mounting Bracket	59-83-3029B2
2	Power Cable (See Note #1)	59-83-3031A-10
3	Motor Cable (See Note #2)	59-83-3031C2-10
4	Thread Drum Switch Cable (See Note #3)	59-83-3040A-11
5	Starter Cable (See Note #4)	59-83-3040B
6	Switch Bracket	59-83-3040F
7	Starter Mounting Bracket	59-83-3041A1
8	C-H Magnetic Coil	#1945-1
9	C-H Thermal Overloads	#H1028
10	Micro Switch	#BZE6-2RQ2
11	H-C Snap Bushing	#SB-875-6
12	C-H Magnetic Starter	#A1OAGO-A
13	G. E. Motor	#5KC36GG113EX
14	C-H Pushbutton Switch	#10250-H <b>52</b> 00
15	Browning Pulley	#AS34 (Type 1F)
16	Scotchlok Wire Nut	Type ''Y''
17	Electrical Box	$\#4\text{CS}\frac{1}{2}$
18	Appleton Cover	#2539
19	Hubble Outlet	#5261
20	Cond. Chase Nipple	1/2"
21	Cond. Locknuts	1/2"
22	T & B Squeeze Conn.	#3302
23	T & B 3/8-45 Conn	#265
24	T & B 3/8-90 Conn.	#266
25	Black Insul. Wire (Type "T")	14 Ga.
26	Black Insul. Wire (Type "F")	14 Ga.
27	Tirex Cord (3 Cond.)	#SJ0-16
28	Hubble Grounding Adaptor	#5273L
29	Flex. Steel Cond	3/8
30	Anti-Short Bushing	#2
Notes:		

#1 - Item #2 consist of items 11, 22, 27, & 28
#2 - Item #3 consist of items 24,25, 29, & 30
#3 - Item #4 consist of items 23, 24, 26, 29, & 30
#4 - Item #5 consist of items 23, 24, 26, 29, & 30

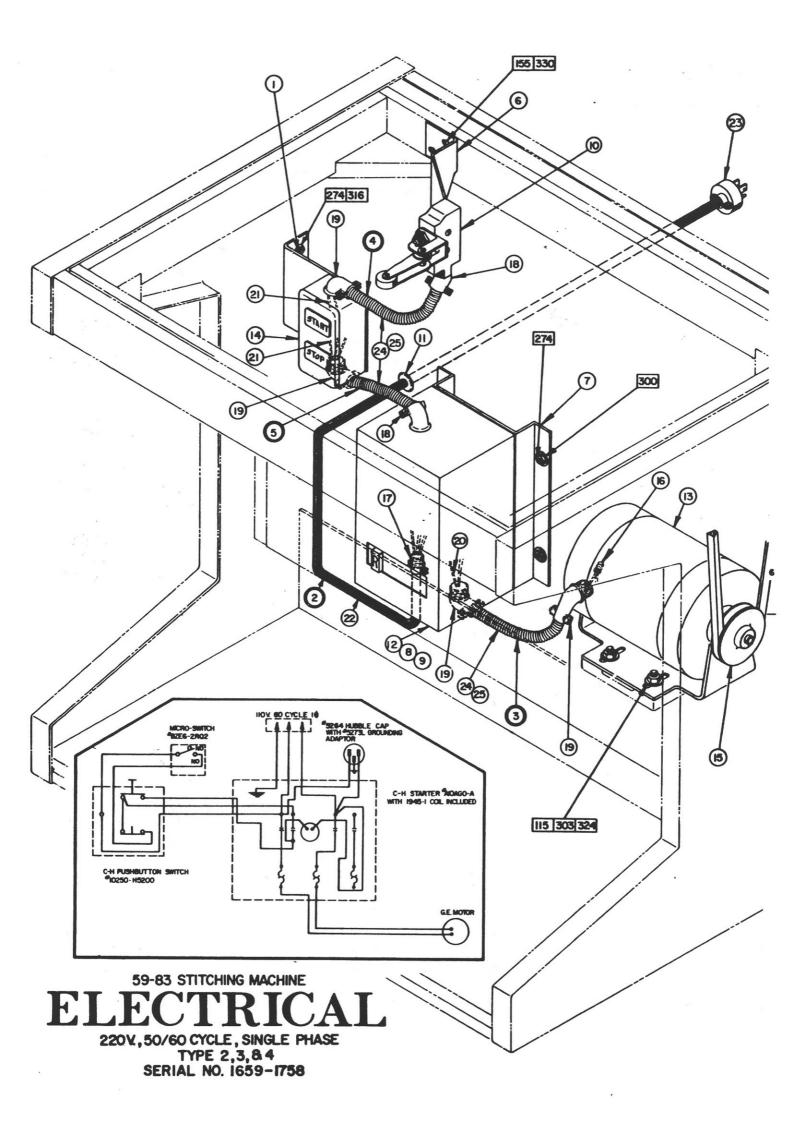




## ELECTRICAL 220 VOLTS - 50/60 CYCLE - SINGLE PHASE TYPE 2, 3. & 4 SERIAL NO. 1659-1758

TOTAL		
ITEM NO.	DESCRIPTION	PART NUMBER
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15	Mounting Bracket Power Cable (See Note #1) Motor Cable (See Note #2) Thread Drum Switch Cable (See Note #3) Starter Cable (See Note #4) Switch Bracket Starter Mounting Bracket C-H Magnetic Coil C-H Thermal Overloads Micro Switch H-C Snap Bushing C-H Magnetic Starter G.E. Motor C-H Pushbutton Switch Browning Pulley Scotchlok Wire Nut	
18	T & B Squeeze Conn.  T & B 3/8-45 Conn.  T & B 3/8-90 Conn.  Black Insul. Wire (Type "T")  Black Insul. Wire (Type "F")  Tirex Cord (3 Cond.)  Hubble Grounding Adaptor  Flex. Steel Cond.  Anti-Short Bushing	#3302 #265 #266 14 Ga. 14 Ga. #SJO-16 #5273L 3/8
Notes:		
	#1 - Item #2 consist of items 11, 17, 2 #2 - Item #3 consist of items 19, 20, 2 #3 - Item #4 consist of items 18, 19, 2 #4 - Item #5 consist of items 18, 19, 2	4 & 25 1, 24, & 25

#5 - For 50 cycle operation use G.E. Motor #5KC38MG339k

1/4 H.P., 1425 R.P.M. Single Phase

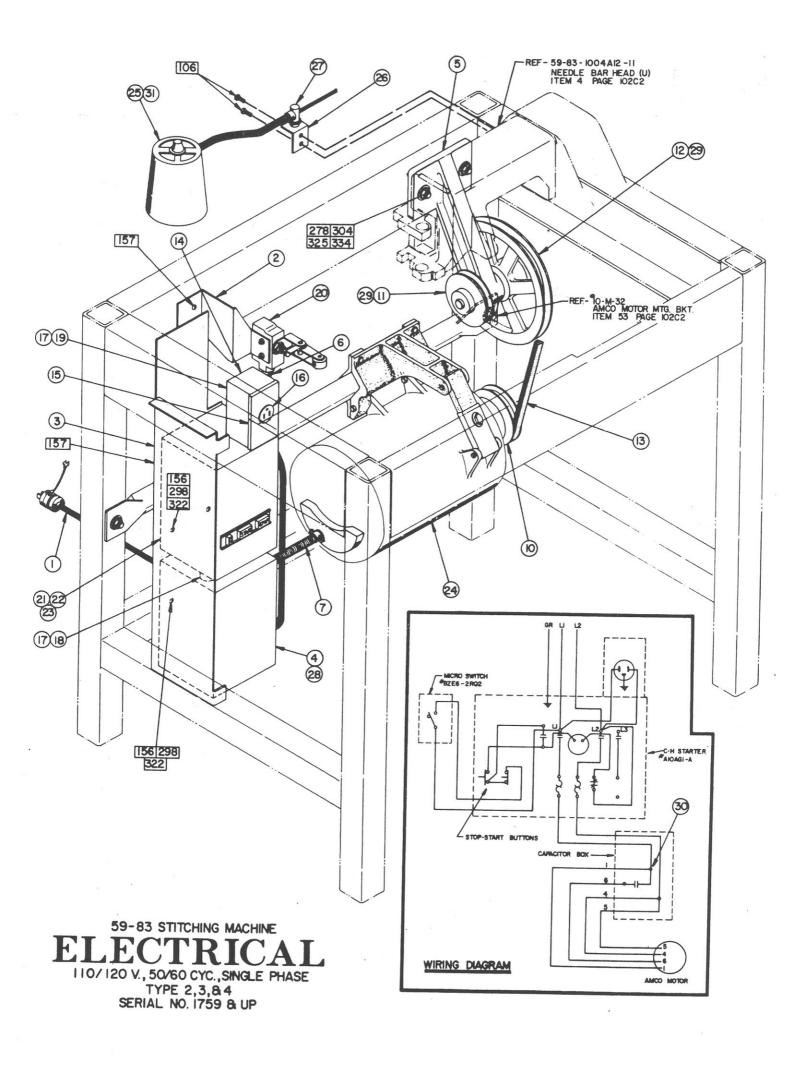




## ELECTRICAL 110/120 V., 50/60 CYCLE, SINGLE PHASE TYPE 2,3, & 4 NUMBER 1759 & UP

ITEM NO.	DESCRIPTION	PART NUMBER
1 ° 2 3 4 5 6 7	Power Cable Switch Bracket Electrical Bracket. Capacitor Box Counter Shaft Bracket. Switch Cable Motor Cable	59-83-3031A1-10 59-83-34648-006 59-83-34762-009 59-83-35654-021 59-83-42721-010 59-83-46314-010 59-83-46711-013
10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31	Browning Pulley Browning Pulley Browning Pulley Browning "V" Belt Appleton Box. Appleton Cover Hubbell Outlet Conduit Chase Nipple Conduit Nipple Conduit Locknuts Micro Switch. C-H Magnetic Starter C-H Thermal Overloads C-H Magnetic Coil AMCO Series TE Clutch Motor Moffatt Multi-Lamp Moffatt Right Angle Shelf Bkt. Moffatt Steel Mtg. Button T & B Knockout Plug ASA Woodruff Key Scotchlok Wire Nuts. G. E. Appliance Bulb	Note #1 #AK34-5/8 Bore #AK84-5/8 Bore #4L390 #4CS-1/2 #2539 #5261 1/2 1/2 X 1-3/4 1/2 #BZEG-2RQ2 #A10AG1-A #H1030 #1945-1 Note #2 #A0615-PR #MLRA #G0EM #1451 #606 Type "Y" #40A15

- Notes: 1. Use #AK39-3/4" Bore Browning Pulley for 50 HZ Machines
  Use #AK34-3/4" Bore Browning Pulley for 60 HZ Machines
  - AMCO Series TE Clutch Motor 1/2 H.P. 110V., 50 HZ Single Phase 1450 R.P.M. 120V., 60 HZ Single Phase 1750 R.P.M.

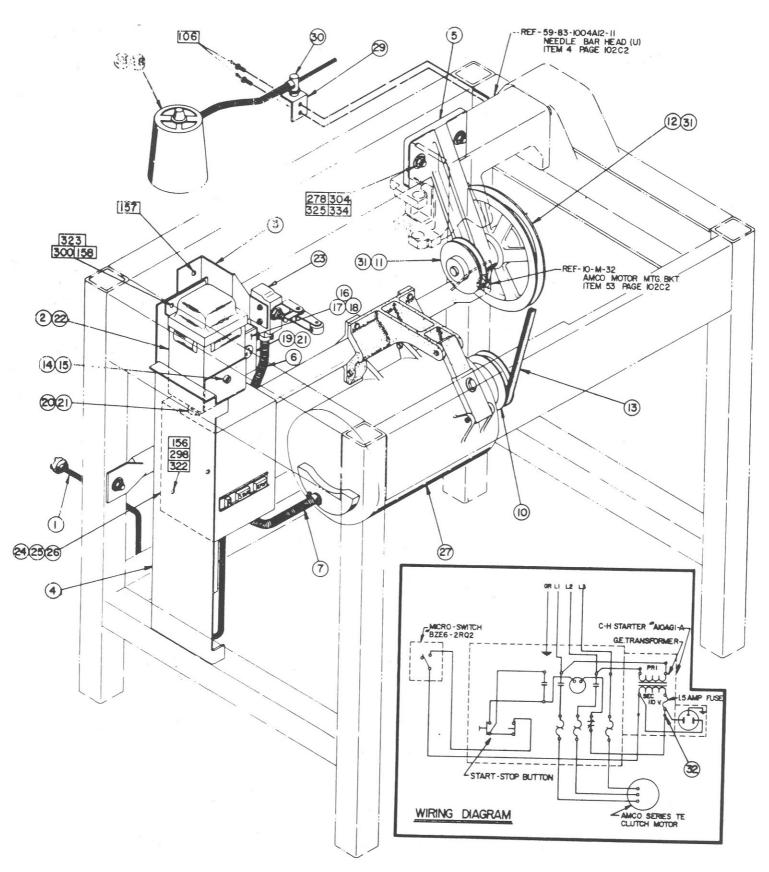

#### 59-83 STITCHING MACHINE 220/380 V., 50/60 CYC., THREE PHASE TYPE 2,3,8 4

SERIAL NO. 1759 & UP




## ELECTRICAL 220/380 V., 50/60 CYCLE, THREE PHASE TYPE 2,3, & 4 SERIAL NUMBER 1759 & UP

ITEM				
NO.	DESCRIPTION	•	PART NUM	BER
1 2 3 4 5	Power Cable Spacer Switch Bracket Electrical Bracket		59-83-303 59-83-314 59-83-346 59-83-347	23-028 48-006
5 6 7	Counter Shaft Bracket Switch Cable Motor Cable		59-83-427 59-83-463 59-83-467	21-010 14-010
10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25	Browning Pulley Browning Pulley Browning Pulley Browning "V" Belt Buss Fuse Holder Buss Fuse Appleton Box Appleton Cover Hubbell Outlet Conduit Chase Nipple Conduit Nipple Conduit Locknuts G. E. Transformer Micro Switch C-H Magnetic Starter C-H Thermal Overload		Note #1 #AK34-5/8 #AK84-5/8 #4L390 #HKP #MDL-1.5 #4CS-1/2 #2539 #5261 1/2 1/2 X 1-3 1/2 Note #2 #BZE6-2RQ #A10AG1-A Note #3	Bore
26 27 28 29 30 31 32	C-H Magnetic Coil AMCO Series TE Clutch Moto Moffatt Multi-Lamp Moffatt Right Angle Shelf Moffatt Steel Mtg. Button ASA Woodruff Key Scotchlok Wire Nuts G. E. Appliance Bulb		#1945-1 Note #4 #A0615-PP #MLRA #GOEM #606 Type "Y" #40A15	

#### Notes:

- Use #AK39-3/4" Bore Browning Pulley for 50 HZ Machines.
  Use #AK34-3/4" Bore Borwning Pulley for 60 HZ Machines
- For 208/220 V. use G. E. Transformer #9T51Y4. For 380 V. use \$9T51Y3009.
- For 208/220 V., 60 HZ use #H1024 (-11 Overload. For 220 V., 50 HZ use #H1021. For 380 V., 50 HZ use #H1117.
- AMCO Series TE Clutch Motor 1/2 H.P. 208/220 V., 60 HZ, 3 Phase, 1750 R.P.M.oz 220/380 V., 50 HZ, 3 Phase, 1450 R.P.M.

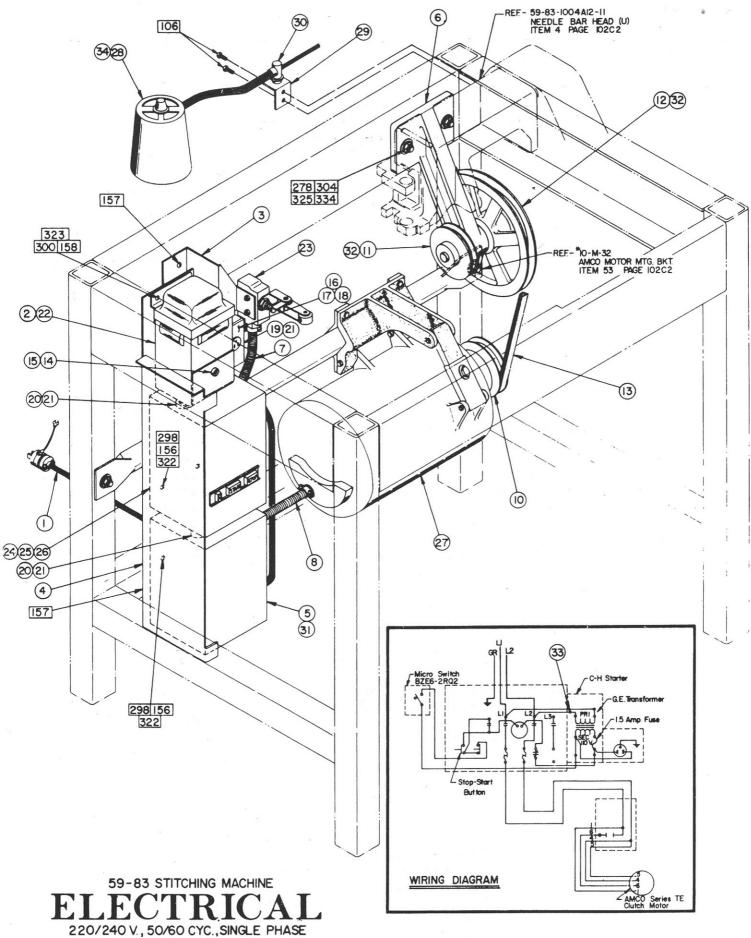

220/240 V., 50/60 CYC., SINGLE PHASE TYPE 2, 3, 8, 4 SERIAL NO. 1759 & UP




## ELECTRICAL 220/240 V., 50/60 CYCLE, SINGLE PHASE TYPE 2,3, & 4 SERIAL NUMBER 1759 & UP

ITEM NO.	DESCRIPTION	*	PART NUMBER
1 2 3 4 5 6 7 8	Power Cable Spacer Switch Bracket Electrical Bracket Capacitor Box Counter Shaft Bkt. Switch Cable Motor Cable		59-83-3031A1-10 59-83-31423-028 59-83-34648-006 59-83-34762-009 59-83-35654-021 59-83-42721-010 59-83-46314-010 59-83-46711-013
10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34	Browning Pulley Browning Pulley Browning Pulley Browning "V" Belt Buss Fuse Holder Buss Fuse Appleton Box Appleton Cover Hubbell Outlet Conduit Chase Nipple Conduit Nipple Conduit Locknuts G. E. Transformer Micro Switch C-H Magnetic Starter C-H Thermal Overloads C-H Magnetic Coil AMCO Series TE Clutch Motor Moffatt Multi-Lamp Moffatt Right Angle Shelf Bkt. Moffatt Steel Mtg. Button T & B Knockout Plug ASA Woodruff Key Scotchlok Wire Nuts G. E. Appliance Bulb		Note #1 #AK34-5/8" Bore #AK84-5/8" Bore #4L390 #HKP #MDL-1.5 #4CS 1/2 #2539 #5261 1/2 1/2 x 1-3/4 1/2 #9T51Y4 BZEG-2RQ2 #A10AG1-A Note #2 #1945-1 Note #3 #A0615-PR #MLRA #GOEM #1451 - 1/2" #606 Type "Y" #40A15

#### Notes:

- 1- Use #AK39, 3/4" Bore Browning Pulley for 50 HZ Machines.
  Use #AK34, 3/4" Bore Browning Pulley for 60 HZ Machines.
- For 220 V., 50 HZ use C-H Overload #H1025 For 240 V., 60 HZ use C-H Overload #H1066
- AMCO Series TE Clutch Motor 1/2 H.P. 220 V., 50 HZ, Single Phase, 1450 R.P.M. or 240 V., 60 HZ, Single Phase, 1750 R.P.M.

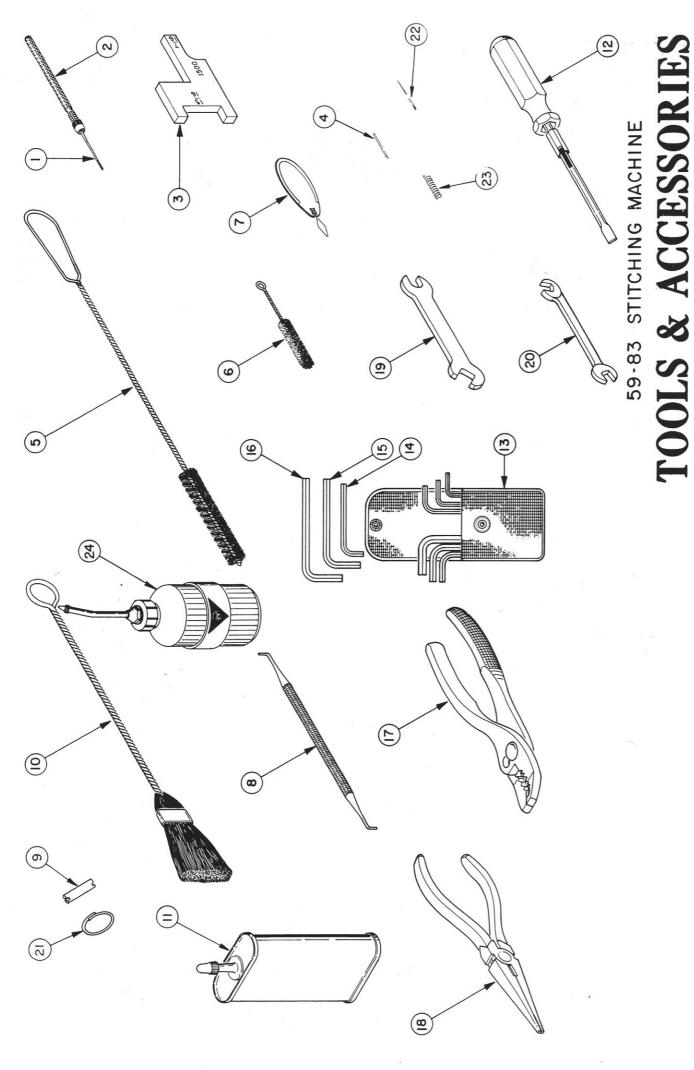

## LO & MUCEDOUN TYPE 2,3,84 SERIAL NO. 1209 8 UP




8 4

TOOLS & ACCESSORIES - TYPE 2,3, SERIAL NUMBER 1209 & UP

## TOOLS & ACCESSORIES TYPE 2,3, & 4 SERIAL NUMBER 1209 & UP

T T DIM		
NO	DESCRIPTION	PART NUMBER
	TOOLS	
1	Spindle Lint Remover	.59-78-1044A
2	Lint Remover Handle	59-78-1044B
က	-,-	.59-83-1031El
4		59-83-1095F2
2	Perk Brush	.59-83-1503A
9	Razor Brush	59-83-1503C
7	Needle Threader	.59-83-1503D
∞	Needle Bar Cleaner	_
6	Needle Stop Pin	.59-83-1501F
10	on Oil Br	#154
11	Gulf Oil Can	.4 oz. can
12	E-Zee Screw D	#TR4
13	Allen Key Set	#605
14		64 Across
15		
16	Allen Key	Across
- 17	Crescent Thin Nose Pliers	#J26
- 18	Needle Nose Pliers	.#1033
- 19	Singer Wrench	#10875
20	Williams Superwrench	.#1120
21	Needle Stop Pin Retainer	.59-83-1025Dl
22	Round Needle	59-83-1032B1-36
23	Needle Stop Spring	.59-83-1501Bl
24	Oiler	.84-4-1324D
ACCES	ACCESSORIES NOT ILLUSTRATED	
Α.	e Stop	59-83-1501C4
B.		11/64 Dia.
ပ်	Skein White ThreadSize	.Size A, 48"

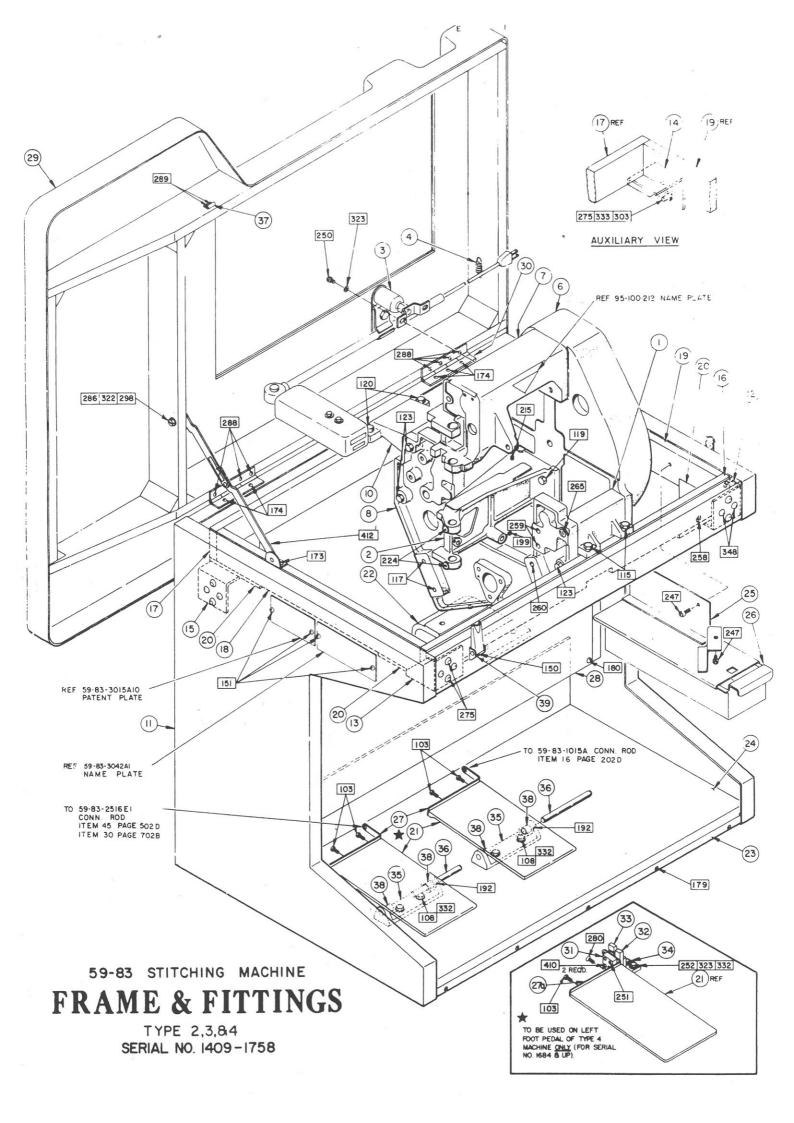




### FRAME & FITTINGS TYPE 2,3,& 4 SERIAL NUMBER 1409-1758

ITEM		
NO.	DESCRIPTION	PART NUMBER
1		59-83-101A2
2	Frame Spacer (F)	59-83-102A3
3	Light	59-83-104A-M
4	W C	59-83-104B
6	Housing (Note #1)	59-83-1003A6
7	Needle Bar Head (U) (Note #1)	59-83-1004A10-11
8	Tie Frame	59-83-1006A7
10	Frame Spacer (R)	59-83-3011B2
11	Base Weldment	59-83-3025A
12	Support Bracket (R-F)	59-83-3026C
13	Support Bracket (L-F)	59-83-3026D
14	Support Bracket (R-R)	59-83-3026E
15	Support Bracket (L-R)	59-83-3026F
16	Inner Frame Bar (F)	59-83-3027A
17	Inner Frame Bar (R)	59-83-3027B
18	Frame Bar (L)	59-83-3027C
	Frame Bar (R)	59-83-3027D
20	Corner Gusset	59-83-3027E
21	Foot Pedal	59-83-3028A
22	Motor Bracket	59-83-3028B
23	Tread Plate Moulding	59-83-3028C
24	Tread Plate Covering	59-83-3028D
25	Tool Drawer Receiver	59-83-3028E
26	Tool Drawer	59-83-3028F
27	Pedal Arm Extension	59-83-3029A-10
27a	Pedal Arm Extension	59-83-3029A-11
28	Front Panel	59-83-3029C
29	Table	59-83-3030A-M
•	Table Hinge	59-83-3032A
31	Plunger Holder Block	59-83-33171-032
32	Lower Position Block	59-83-33175-020
33	Middle Position Block	59-83-33175-021
34	Control Bracket	59-83-34231-017
35	Pedal Pivot Bracket	84-4-1407A
36	Pedal Shaft	84-4-1407C
37	Front Hook	84-4-1453D
38	Oilite Bushing	#10-250-1A-64
39	Cam-Loc	#51L1-1-1AB

Note #1: Items 2,6, & 7 are sold assembled as 59-83-103A2 Needle Bar Head Assembly

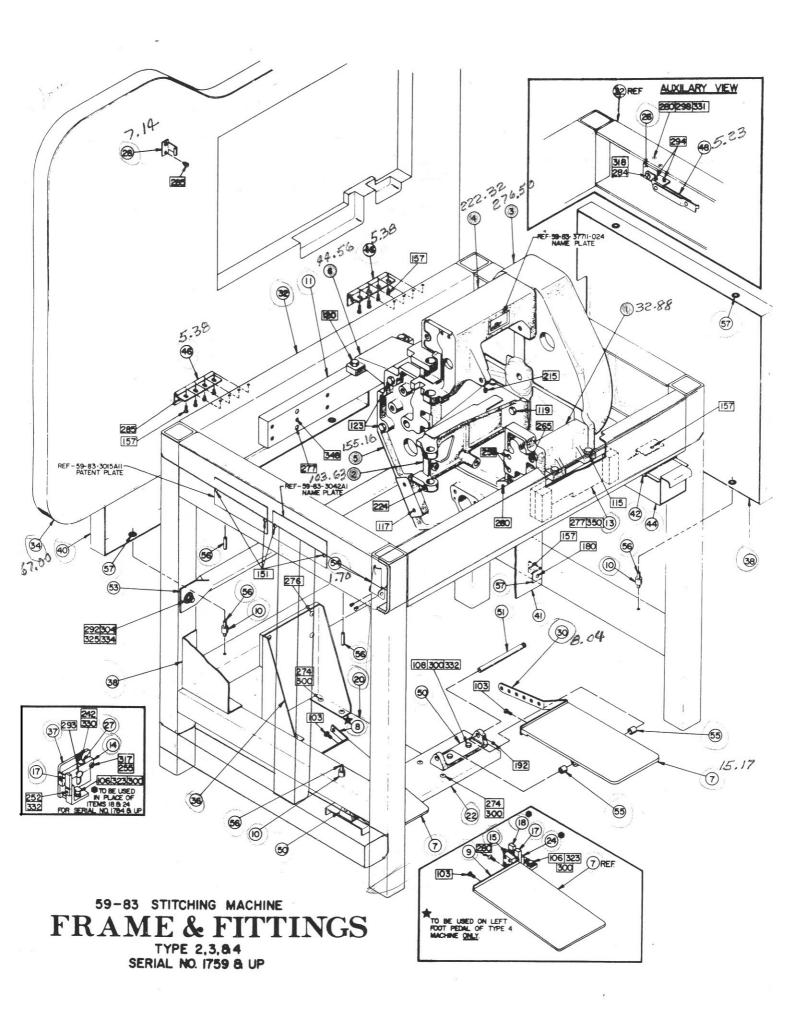




#### FRAME & FITTINGS TYPE 2,3,4 4 SERIAL NUMBER 1759 & UP

T (T) (	SEKTAL NUMBER 1/39 G UP	_
ITEM		
NO.	DESCRIPTION	PART NUMBER
1	Frame Spacer (F)	59-83-101A2
2 3	Needle Bar Head (L) (Note #1) Housing (Note #1)	59-83-102A3 59-83-1003A6
4	g . ,	59-83 <del>-1004A12-11</del>
5	Tie Frame	59-83-1006A7 - chg
4 5 6 7	Frame Spacer Pedal	59-83-3011B2
8 9		59-83-3028A
	Pedal Arm Extension	59-83-3029A-11
10	Spacer (Note #2)	59-83-31423-032
11 13	Frame Bracket - Rear Frame Bracket - Front	59-83-32413-052
14	Adj. Position Block	59-83-32735-020 59-83-32783-002
15	Plunger Holder Block	59-83-33171-032
17 18	Lower Position Block	59-83-33175-020
20	Middle Position Block Platform Extension	59-83-33175-021 59-83-34125-052
22	Pedal Platform	59-83-34145-020 - New
24	Control Bracket	59-83-34231-017
26 27	Table Strut Bracket Clip	59-83-34231-019
	Hook	59-83-34264-016 59-83-34584-007
30	Pedal Extension	59 - 83 - 34767 - 009
3 2 3 4	Main Frame	59-83-35322-009 - New
36	Table Pedal Platform Support	59-83-35351-060° 59-83-35441-043
37	Position Base	59-83-35441-043
38	Side Panel	59-83-35714-009
40 41	Back Panel Front Panel	59-83-35718-005
42	Drawer Slide	59-83-35778-015 - New 59-83-36785-004
44	Tool Drawer	59-83-37151-034
4 6 4 8	Table Hinge Table Support	59-83-41214-004
50	Pedal Pivot Bkt.	59-83-41441-02C 84-4-1407A
51	Pedal Shaft	84-4-1407
52	Angle Clip	84-6-34272-025
5 3 5 <b>4</b>	AMCO Motor Mtg. Bkt. Camloc Latch	#10-M-32 #51L1-1-1AB*
55	Oilite Bushing	#10-250-1A-64
56	Roll Pin (Note #2)	7/32 Dia. X 1 13
5 7	Grommet, Atlantic India Rubber Co.	# 29 0 2

Note#1: Items 2,3, & 4 are sold assembled as 59-83-103A2 Needle Bar Head Assembly

Note#2: For Serial #1759 - 1858 order Part. No


59-83-31851-016.

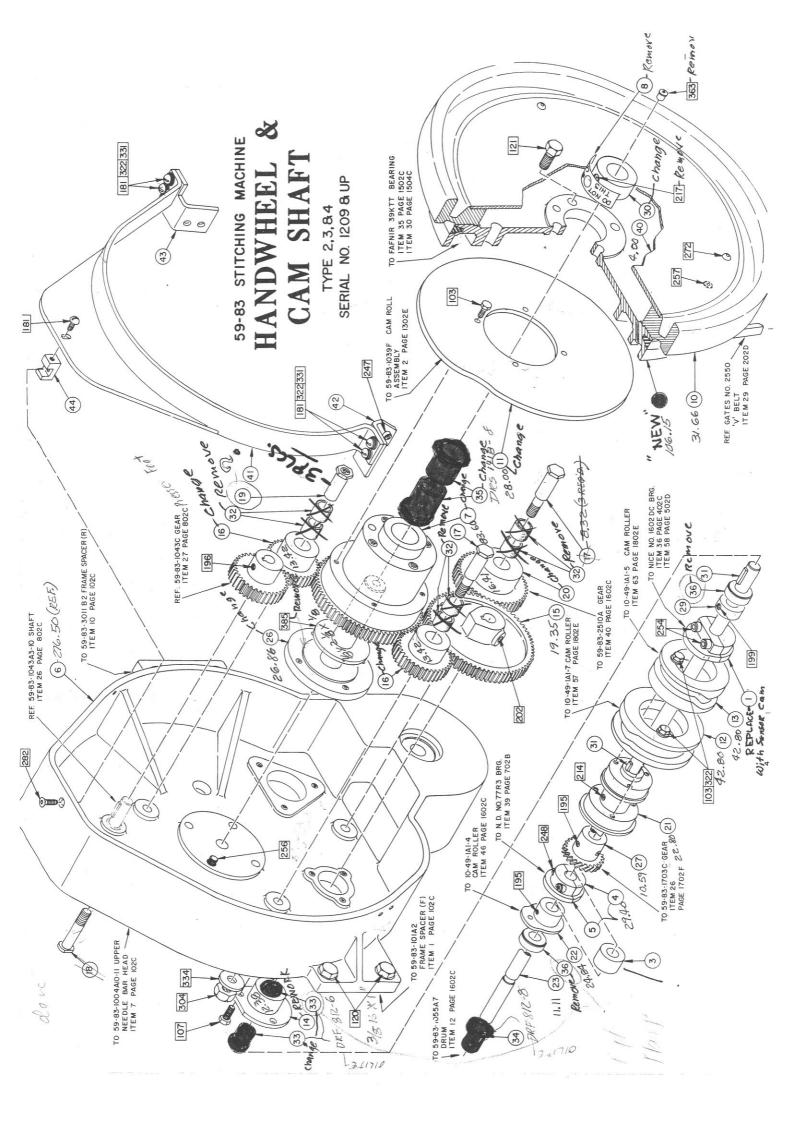



# HANDWHEEL & CAM SHAFT - TYPE 2,3, & 4 SERIAL NUMBER 1209 & UP

		HANDWHE	EEL & CAM SHAFT	
		TYPE SERIAL)		
		*	1.10 - 146 - 06.1	
	.n	十 業	1A-80 % × 1/6 × 1/	
	U E	) S T O	1 4 6	
BER	000	-1A-5 -1A-11 & -1100-3	-1A-80 % % % % % % % % % % % % % % % % % % %	
NUM	-13	41-1	1111	
PART NUMBER	59-83-1300C1 Chi	10-45-1A-5 $10-45-1A-11$ $C$ $10-100-1100-3$	10-250-1A-83 10-250-1A-83 10-250-1A-12 #603-1/4 59-83-1094A 59-83-1094B 59-83-1094B 59-83-1094C 59-83-1094D	
PA	59	242	10-10-10-10-10-10-10-10-10-10-10-10-10-1	
	18e,	• 0	3. x	
ION	Flange 1301A	Ţ :	00.7 11.7	
DESCRIPTION		Screw Collar-Screw Collar-Screw Collar-Yro Key	shing shing shing shing shing shing shing covery to be shing description and ship ship ship ship ship ship ship ship	
SCR	mbl 130 ud 8	ew Coll ew Coll Key	Bushing Bushing Gear Bee Cove ard tg. Bkt. gg. Bkt. tg. Bkt.	
DE	Assembly ides 1300 s1 Stud & ig)	Screw Screw Screw Fro Key	Busineel (Gearling)  Busineel (Gearling)  Busineel (Gearling)  Mtg. Iftg. I	
	Stud Assembly  (Includes 1300A F1 1300Bl Stud & 130 Ring)  Drive Gear			
	Stud (Inclu 1300E Rin Drive	Set Set Set Hi F	Oilith Oilith Oilith Bosto Thro Handw Belt Front Rear Upper	
ITEM NO.	26	330 330 331 331	333 333 44 44 44 43 44 43	
LI	0 0	N ON CO CO	<u> </u>	Chg.
æ	4	3		2222
PART NUMBER	03E4	05B2	1003A6 1003A6 1003B6 1029A3 1030A4 1071C 1072E 1072E 1073A 1073B5 1073B5	076B2 076B2 076D2 077A2
NO	, 59-83-50 , 59-83-50	-83-70		83-10 83-10 83-10 83-10
ART	σο σο 1 1	8 - 6 - 8 - 6	50000000000000000000000000000000000000	
	6.6	10		0 0 0
д	· ~ · E	59		כוו כוו כוו כוו
	· ~ · E	: • • · · · · · · · · · · · · · · · · ·		כוו כוו כוו כוו
	· ~ · E	ат. 3 1у)	Cam Cam Cam Tring	כוו כוו כוו כוו
	on Type 4) cer Item 4 Cam	te Cam. Type 3 e only)	Cam Cam Cam Tring	כוו כוו כוו כוו
DESCRIPTION P	Sed on Type 4) Spacer ces Item 4 Cam	te Cam. Type 3 e only)	Cam Cam Cam Tring	כוו כוו כוו כוו
	used on Type 4) Spacer aces Item 4 Cam	ines) Plate Cam. on Type 3 chine only)	ing  e Gear  le Bar Cam wheel  r Looper Cam ad Clamp Cam er Hook Cam Shaft Bearing  I Inter Gear  Stud Bolt  Bushing	lub  1 Oper Cam,  5 Shaft  mic Stith Cartal Cam  Mounting Bracket
DESCRIPTION	on Type 4) cer Item 4 Cam	e Cam. ype 3 only)	ng Gear  e Bar Cam heel Looper Cam d Clamp Cam r Hook Cam haft Bearing Gear Inter Gear Stud Bolt	
	used on Type 4) Spacer aces Item 4 Cam	Machines) Angle Plate Cam. (Used on Type 3 Machine only) Cam Shim	Housing Drive Gear Decal Needle Bar Cam Handwheel Upper Looper Cam Thread Clamp Cam Cam Shaft Bearing Drive Gear Small Inter Gear Gear Stud Gear Bolt	Cam Hub Brush Oper Cam, Cam Shaft Electronic Stitch Control Cam Sensor Mounting Bracket

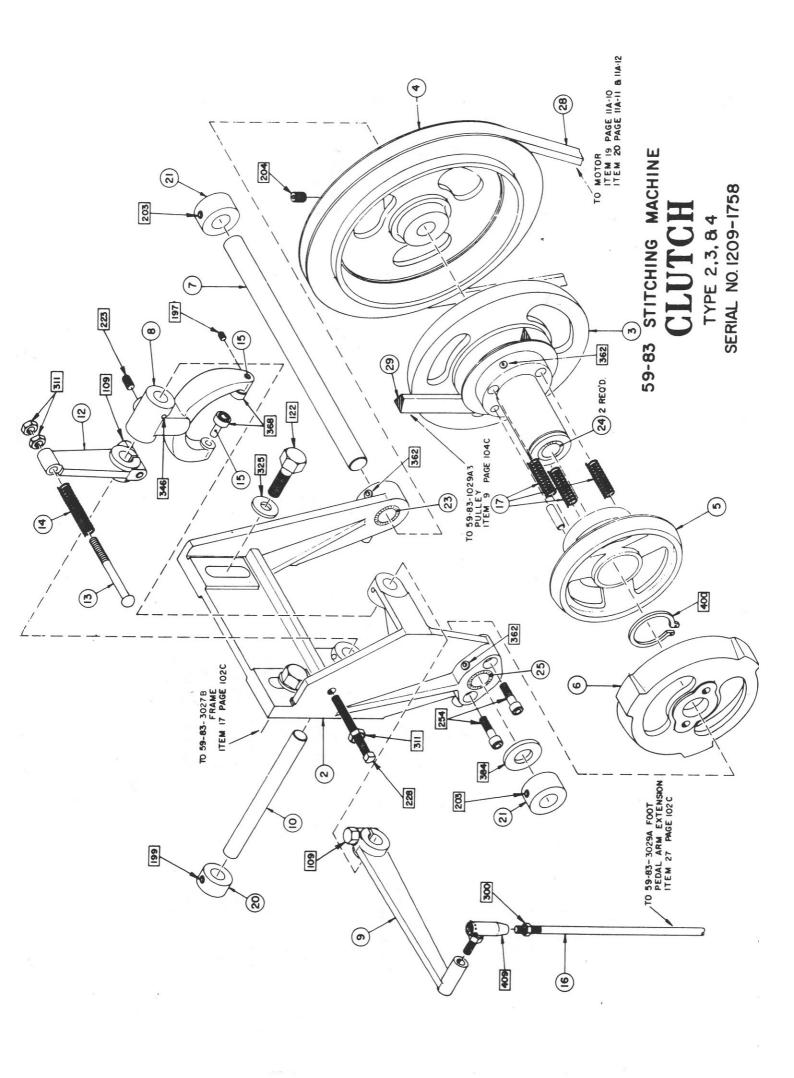




#### CLUTCH

#### TYPE 2,3, & 4 SERIAL NUMBER 1209-1758

PART NUMBER	59-83-200A2 59-83-201A	-83-	59-83-202A1	59-83-	59-83-202D3 59-83-203A2	59-83-203B1	59-83-	59-83-203E	83.1	-83-	. 1		10-45-1A-	•	10-	-250-1A-	#2370	#2550
DESCRIPTION	BracketInner Disc	Outer Disc.	Clutch Brake	Drive Shaft		Yoke Shaft	Lever.	Spring.	Roller Stud	nu.	Disc Spring		Scr	Oilite Bushing	lite Bushing	Oilite Bushing		Gates Belt
NO.	20 00	4 1	၈ မ	. α	၁၈		13	2 4		9	2	20				25	58	

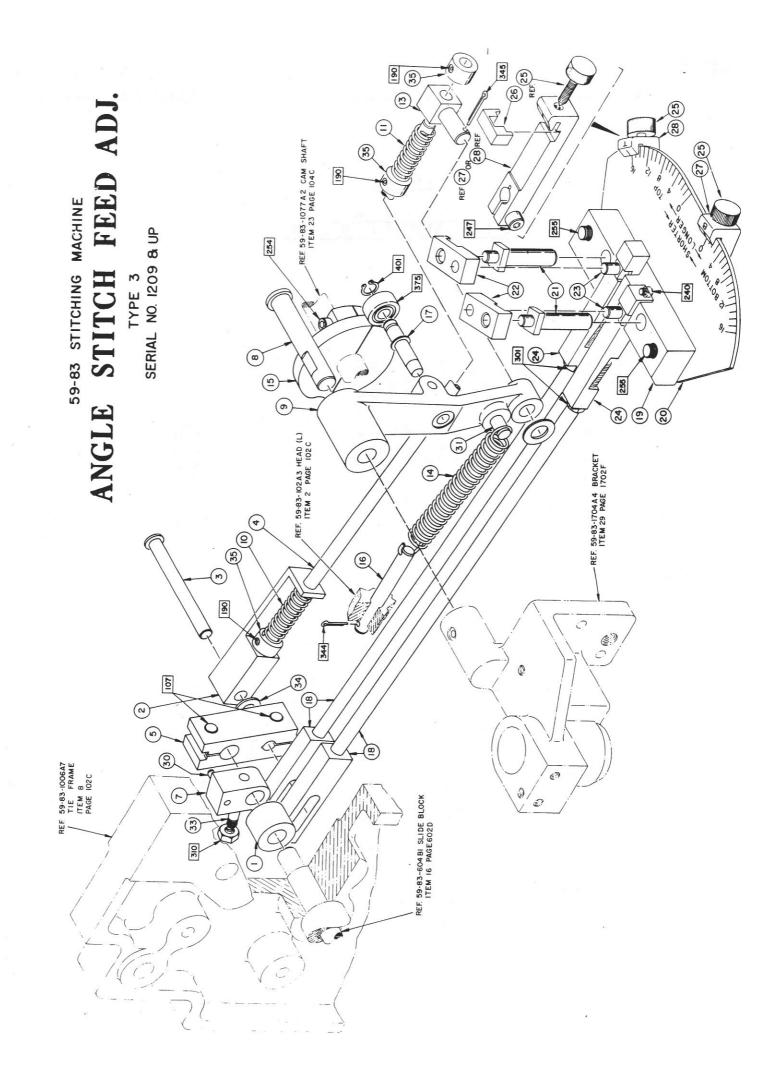




ANGLE STITCH FEED ADJUSTER - TYPE SERIAL NUMBER 1209 & UP

## ANGLE STITCH FEED ADJUSTER TYPE 3 SERIAL NUMBER 1209 & UP

Arm Spacer  Arm Spacer  Arm Head  Arm Bracket  Control Block  Sp-83-400B  59-83-400B  59-83-400B  59-83-400B  59-83-400B  59-83-400B  59-83-400B  59-83-400B  59-83-400B  59-83-500F  Control Block  Cont								
Arm Spacer Arm Head Head Pin Conn. Rod Arm Bracket.  Control Block Lever Stud Cam Lever Rod Spring Adj. Cam Spring Stud Roller Stud Arm Assembly (includes 501B4 Stop & 502F7 Rod) Mounting Plate Large Stud Small Lever Small Stud Setting Plate Large Stud Setting Plate Locking Plate Locking Plate Locking Plate Stop Block Slider Locking Plate Locking Plate Setting Lever Small Stud Spring Lever Small Stud Spring Dowel Pin Spring Post Clamp Stud Spring Post		\$ \$ \$ \$ \$ \$ \$	9-83- 9-83- 9-83-	9-83- 9-83- 9-83-	59-83-506F1 59-83-510A 59-83-510B	59-83-510C 59-83-510D 59-83-510D 59-83-510F 59-83-511A	00-2 A1-6	-25-1A1-5 -40-1100-
NO N	DESCRIPTION	Spacer Head Pin Rod Sracket	Stud Stud ever	Head Spring Sam s Stud	ssembly	Stud Lever Stud Slock Slider ng Screw ng Plate	om Setting Lever Setting Lever	٠,
	NO.	1 2 8 4 3 5		13 14 15 16	18 20 20	21 22 23 25 26	27 28 30 31	33

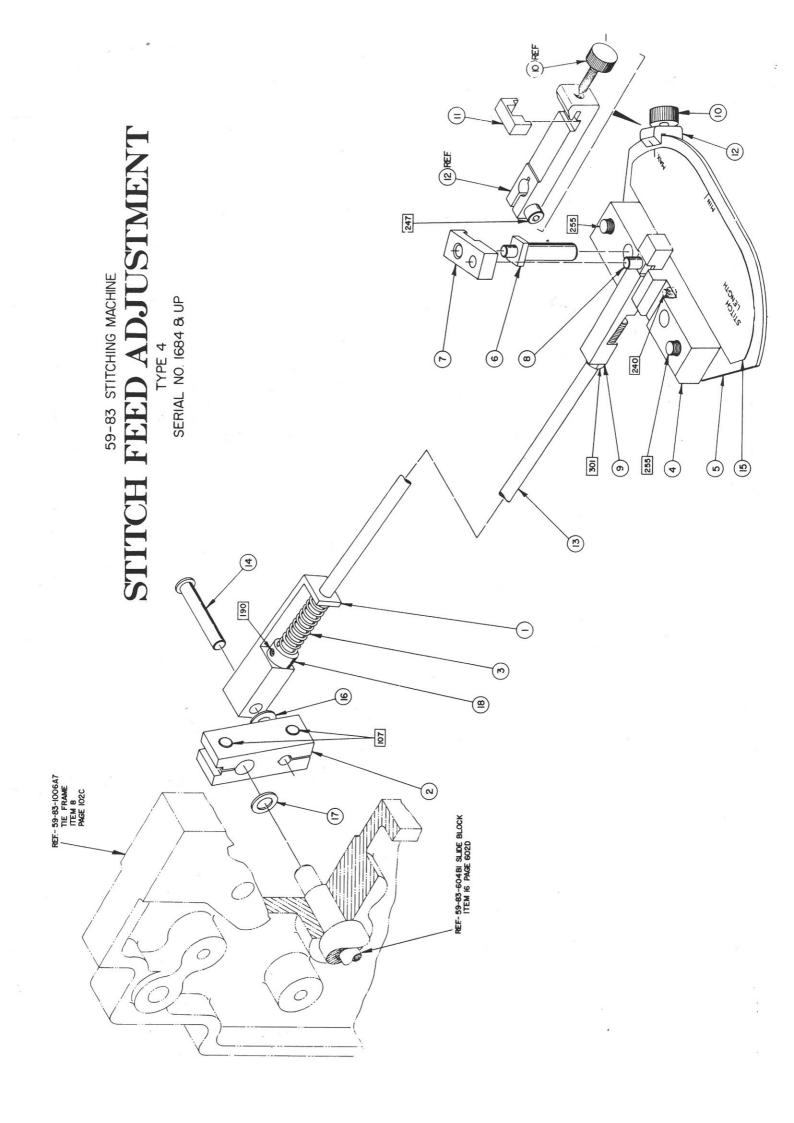



## STITCH FEED ADJUSTMENT TYPE 4 SERIAL NUMBER 1684 & UP

59-83-31286-009 59-83-31611-045

59-83-37731-032

Stitch Length Decal.....

Set Screw Collar

Washer Washer


Stitch Adj. Conn. Rod....

Plain Stud

#10-40-1100-15 #10-40-1100-117

#10-45-1A-1 or Boston #SC25


PART NUMBER 59-83-400B2 59-83-400El 59-83-501El 59-83-511D 59-83-510D 59-83-511B 59-83-510A 59-83-510B 59-83-510C 59-83-510E 59-83-510F 59-83-511A STITCH FEED ADJUSTMENT - TYPE SERIAL NUMBER 1684 & DESCRIPTION Locking Plate..... Setting Plate.... Stop Block Slider, Arm Head ..... Fop Setting Lever Rod Spring..... Small Lever.... Mounting Bracket Locking Screw Arm Bracket Jarge Stud Small Stud

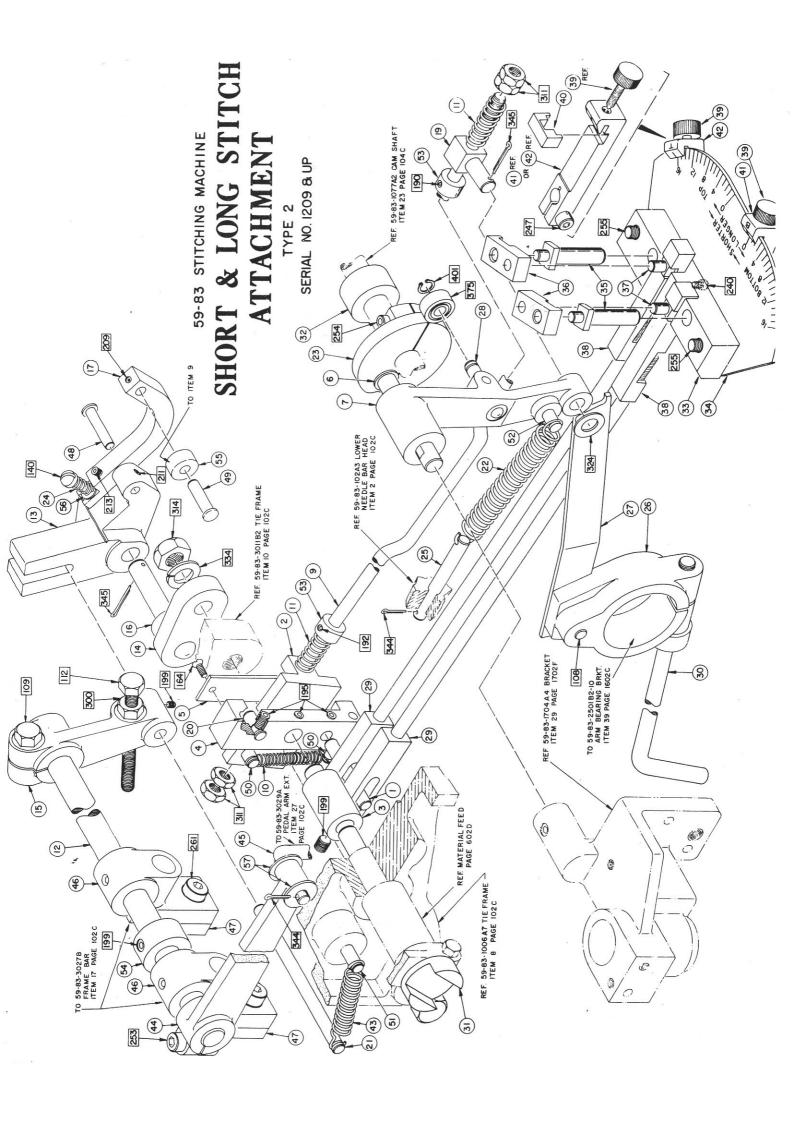



## SHORT & LONG STITCH ATTACHMENT TYPE 2 SERIAL NUMBER 1209 & UP

																7		-10					-					4	5	)					
		PART NUMBER	9-83-50	-83-	59-83-510A	59-83-510B	59-83-510C	59-83-510D	59-83-510E	9-83-51	-83-51	9-83-511	-83-51	-83-511	3-10	-83-	-83-25	-83-3010D	-83-301	-1-1A-5	0-6-1A1-	A-5	-20-1A-6	0 - 1	4	10-45-1A-5	-	-40-110	-40-1						
HMENT - TYPE 2	3	DESCRIPTION		Shaft Spacer	Mounting Bracket	Setting Plate	Large Stud	Small Lever	Small Stud	ock Slide	Locking Screw		U2	Top Setting Lever	r Spring			t B	Spacer		oll Stu	Spring Post	pring Pos	ing		Set Screw Collar	Cam Roller	Washer	Washer						
ATTACHMENT	H	NO.	31	32	33	34	35	36	37	38	39	40	41						47	48	49	50	51	52				26	22						
ORT & LONG STITCH		PART NUMBER	59-83-500A2	9-83-	9-83-	-83-	9-83-		9-83-		-83-	-	-83-	-83-	1	59-83-502B	59-83-502C1		59-83-502El		9-83-	59-83-503B	9-83-	9-83-	-83-	9-83-	9-83-	9-83-	9-83-50	-83-506	59-83-506F1		59-83-507B1		
SH		DESCRIPTION	Yoke Pin	Clutch Yoke	Arm Hub	Adjust, Arm	Arm Cover	Lever Stud	Cam Lever		Conn. Rod	Yoke Spring	Rod Spring	Control Shaft	Shift Arm	Stud Bracket	Shift Lever	Arm Stud	Shifting Finger		Lever Head	Arm Pin	•—				Spring Stud		. 7	Roller Stud	Q	(Includes 501B4 Stop & 502F7 Rod)	Assemb	(Includes 506Bl Arm & 10-67-1A-3 Spacer)	
	ITEM	NO.	7	.7	n	4	S	9	7		0	10	11	12	13	14	15	16	17		19	20	21	22	23	24	52	26	27	28	53		30		

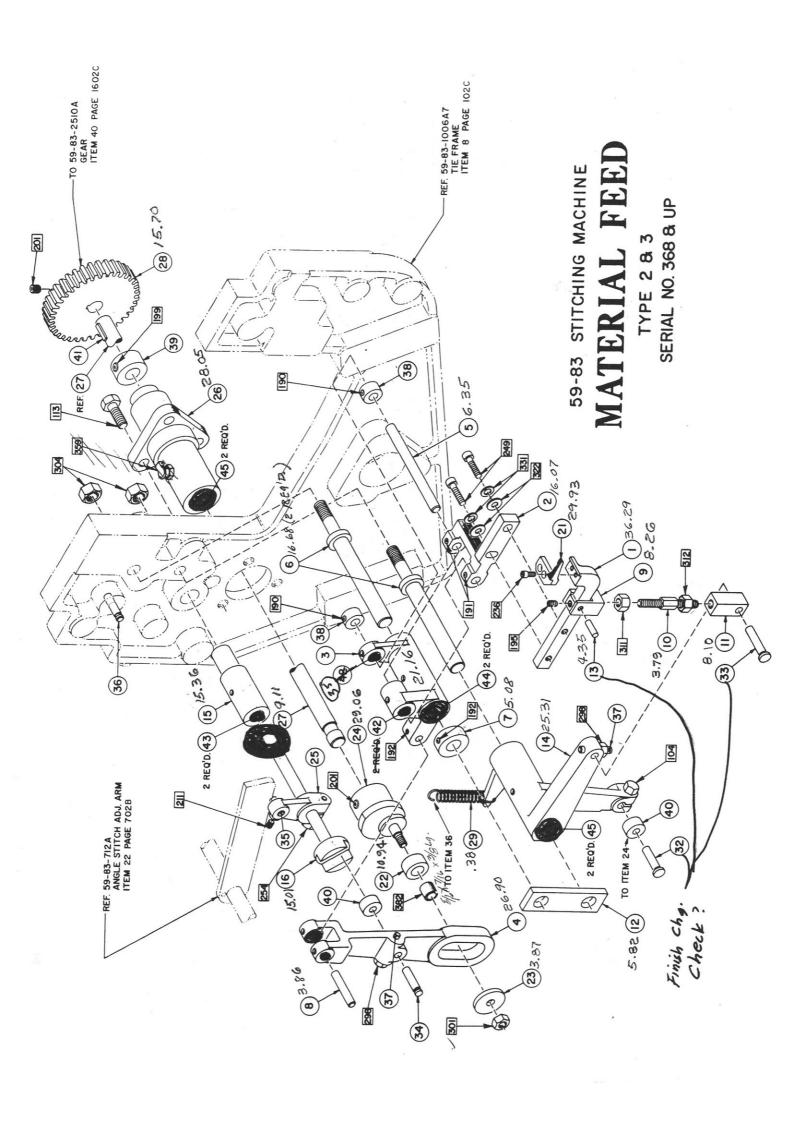




# MATERIAL FEED - TYPE 2 & 3 SERIAL NUMBER 368 & UP

Ber	1053B3 1053D 1054D3 - Ch3. 1054D3 - Ch3. 1054E2 1054E2 1054E2 1061A1 1061A1 100-63 100-63 100-63 1100-6 1100-8 1
PART NUMBER	59-83- 59-83- 59-83- 59-83- 59-83- 59-83- 10-6-1 10-8-1 10-8-1 10-100- 10-250- 10-250- 10-250- 10-250-
DESCRIPTION	Feed Cam Shifter Arm Shaft Bearing Drive Shaft Driven Gear Crank Spring Stike Block Limit Step Limit Block Limit Step Cam Roll Stud Cam Roll Stud Cam Roll Pin Dowel Spring Post Clamp Stud Collar Collar Collar Collar Collite Bushing Oilite Bushing Oilite Bushing Oilite Bushing Oilite Bushing Oilite Bushing Oilite Bushing Fetentiometer Strocket
ITEM NO.	Chy: 255 Chy: 266 Chy: 32 Chy: 33 Chy: 37 Chy: 37 Chy: 38 40 40 41 42 44 45 45 45 45
PART NUMBER	59-83-600A 59-83-600B1 59-83-600D - 643 59-83-601A 59-83-601B1 59-83-601D - 643 59-83-601B 59-83-602B 59-83-602B 59-83-602E1 59-83-602E1 59-83-604A - Chygrology 59-83-604B1 - Chygrology
DESCRIPTION	Feeder Arm Support Bracket Motion Bracket Eccentric Arm Support Bkt. Shaft Motion Bkt. Shaft Shaft Collar Bracket Pin Lifter Rod Rod Head Support Plate Fork Pin Bell Crank Bell Crank Block Bearing Slide Block (Used on Angle Stitch, Type 3, for Short- Long Attachment- Type order 59-83-507C, Item Page 502D) Pulley (\$\forall \text{Feeder}  Material Feeder
ITEM NO.	26 x 4 x 0 2 x 0 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2

part (Example: 59-83-1048A6-12) or order as :"59-83-1048A6 Material \* "M"or MODEL indicates incomplete part number, part varies due to length of stitch. When ordering give complete number stamped on Feeder" and give stitch length desired.

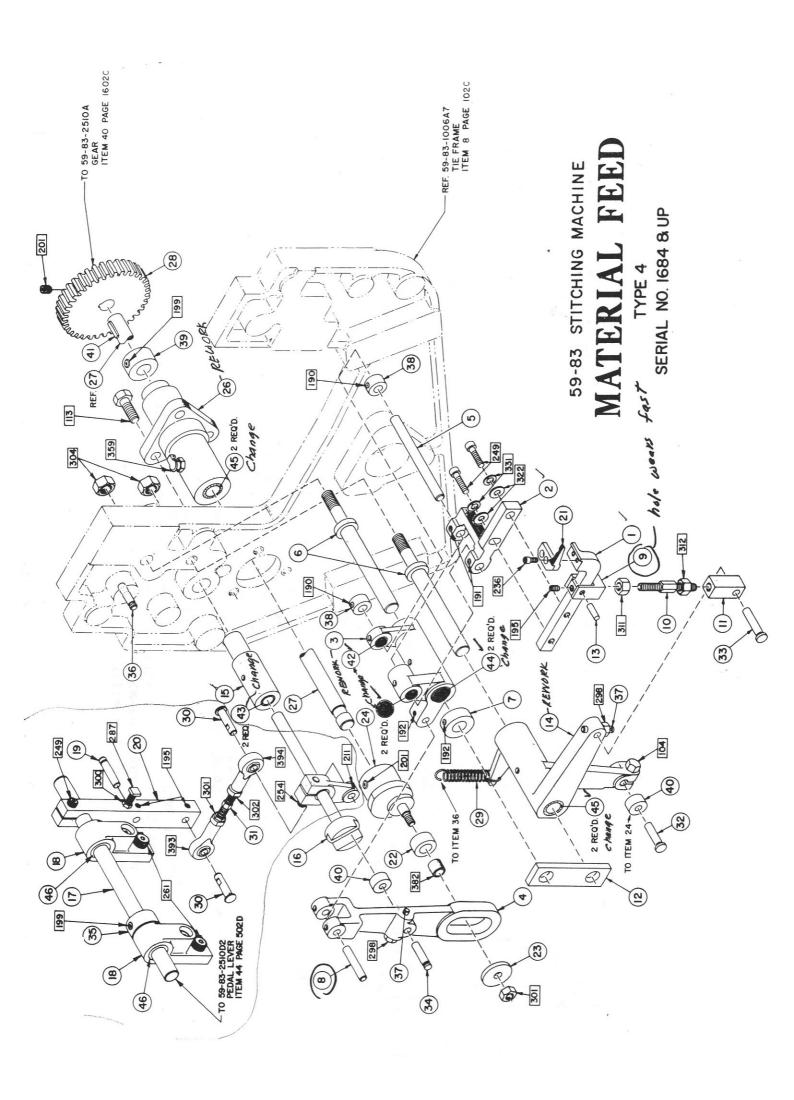




# MATERIAL FEED - TYPE 4 SERIAL NUMBER 1684 & UP

	MATERIAL FEED 3 25 25 25 25 25 25 25 25 25 25 25 25 25	
JMBER	54D3 54E2 54F1 61A1 611-029 852-080 -66 -67 -70 -5 -70 -70 -70 -83 1-53 -83 -84 -84 -84 -84 -84 -84 -84 -84	
PART NUMBER	59-83-1054D3 59-83-1054E2 59-83-1061A1 59-83-1061A1 59-83-31641-0 59-83-31641-0 59-83-31852-0 10-6-1A1-67 10-45-1A-5 10-25-1A1-53 10-45-1A-5 10-45-1A-5 10-45-1A-5 10-45-1A-5 10-250-1A-66 10-250-1A-66 10-250-1A-83 10-250-1A-83 10-250-1A-83	
DESCRIPTION	Shaft Bearing Drive Shaft Driven Gear Crank Spring Plain Stud Connector Rod Cam Roll Stud Cam Roll Din Set Screw Collar Spring Post Clamp Stud Collar Collar Collar Hi Pro Key Ollite Bushing Oilite Bushing Oilite Bushing	
ITEM NO.	22222222222222222222222222222222222222	
PART NUMBER	59-83-600A 59-83-600B1 59-83-600C1 59-83-600D 59-83-601B 59-83-601C 59-83-601D 59-83-602A 59-83-602B 59-83-602B 59-83-602E 59-83-602E 59-83-602E 59-83-604A 59-83-604B 59-83-1001-11 59-83-1050E 59-83-1050E 59-83-1050B	
DESCRIPTION	Feeder Arm Support Bracket Motion Bracket Eccentric Arm Support Bkt. Shaft Motion Bkt. Shaft Shaft Collar Bracket Pin Lifter Fork Lifter Rod Rod Head Support Plate Fork Pin Bell Crank Block Bearing Slide Block Control Shaft Lever Shaft Bracket Spring Post. Operating Lever Material Feeder Cam Roller Ecc. Stud Washer Shifter Arm	
ITEM NO.	225 225 25 25 25 25 25 25 25 25 25 25 25	

to length of stitch. When ordering give complete number stamped on part (Example: 59-83-1048A6-12) or order as "59-83-1048A6 "M" or MODEL indicates incomplete part number, part varies due Material Feeder" and give stitch length desired.

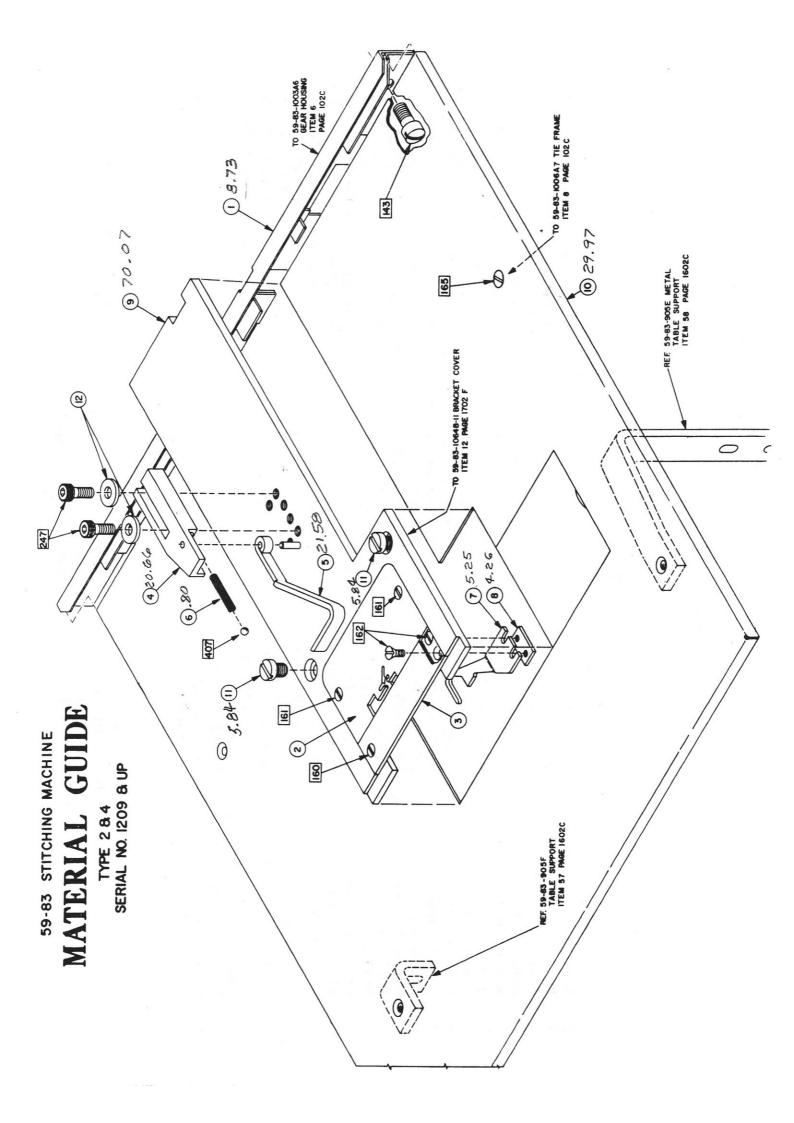



MATERIAL GUIDE - TYPE 2 & SERIAL NO. 1209 & UP

ITEM


## MATERIAL GUIDE TYPE 2 & 4 SERIAL NUMBER 1209 & UP

PART NUMBER	59-83-605A3 - Chg.	59-83-1048D-W* Ch 9.	59-83-1048F1-W* Ck. 9-	59-83-1049E-W	59-83-1049F	59-83-1705B	•	59-83-3014A1 - Cho :	59-83-3014A	10-40-1100-114	
DESCRIPTION	Table Rest Assembly	Throat Plate (R)	Hinge Block	Material Guide	Guide Finger	Clamp Strip	Flate Holder	Table	(10f Serial 1209 to 1258 order)	Flat Washer	
NO.	_	00 00	4.	က ဗ	200	<b>∞</b> c	ם פ	70	11	12	

\* "M" or MODEL -indicates incomplete part number, part varies due to length of stitch

or type of material being sewed.


When ordering give complete part number stamped on part (Example:59-83-1048D-12) or order as "59-83-1048D Plate" and specify length desired and type of material.

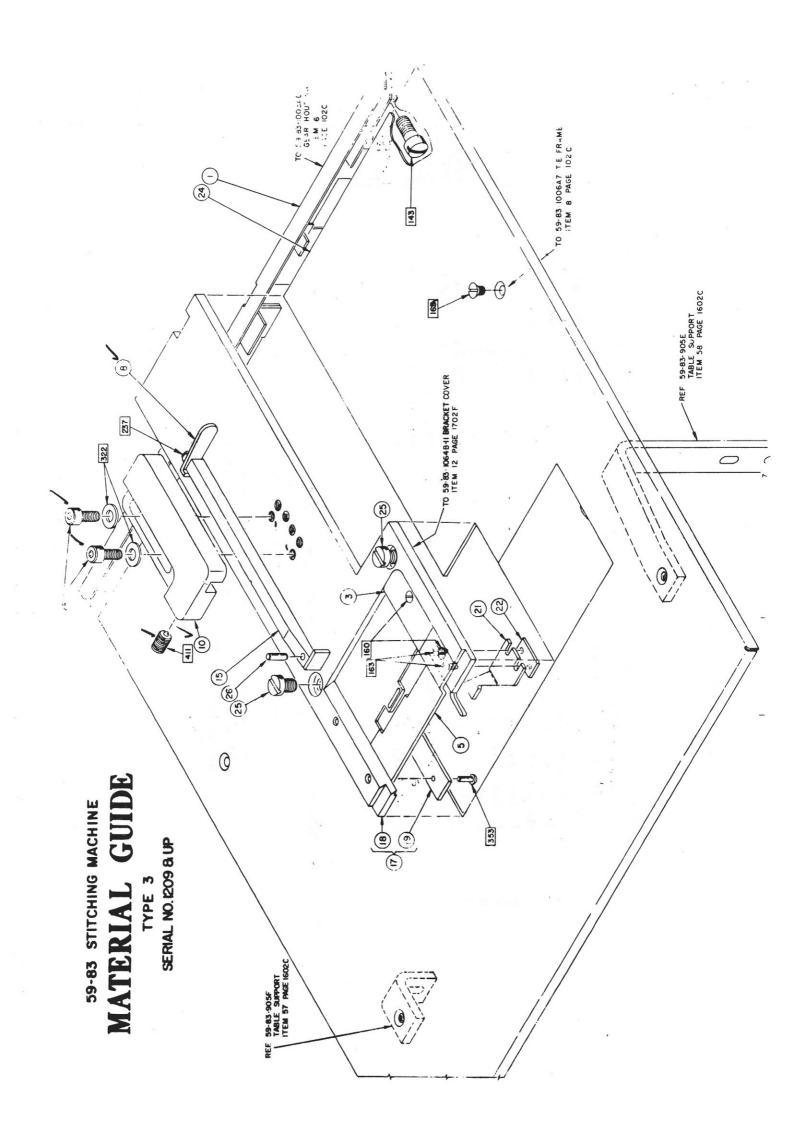



## MATERIAL GUIDE - TYPE 3 SERIAL NUMBER 1209 & UP


PART NUMBER	59-83-605A3 CHG	59-83-701B4 CHG (No B/M)	59-83-701C2 (NO B/W TAN	59-83-712E3 (NOT) ON THE ALL ALL ALL ALL ALL ALL ALL ALL ALL AL	F 3 120 120 120 120 120 120 120 120 120 120	JIDE 9 &	59-83-714E5 (MOB/M)	59-83-715A (NOB/M)	59-83-715B 59-83-715C	59-83-1705A1 (MOB/M)	59-83-1705B 59-83-3014A1 (	83-3014A 83-3009F2 8-1100-16
DESCRIPTION	Table Rest Assembly(Includes 605B3 Strip, 605C, 605D, 605E & 605F Clips)	Throat Plate (R)	Throat Plate (L)	Thumb Piece	Gauge Block		Rod Assembly	Holder Assembly(Includes Itoms 18 8 10)		Guide Finger	Strip	1209 to 1258 order
ITEM		2	2	∞	10		15	17	18	21	22 24	25

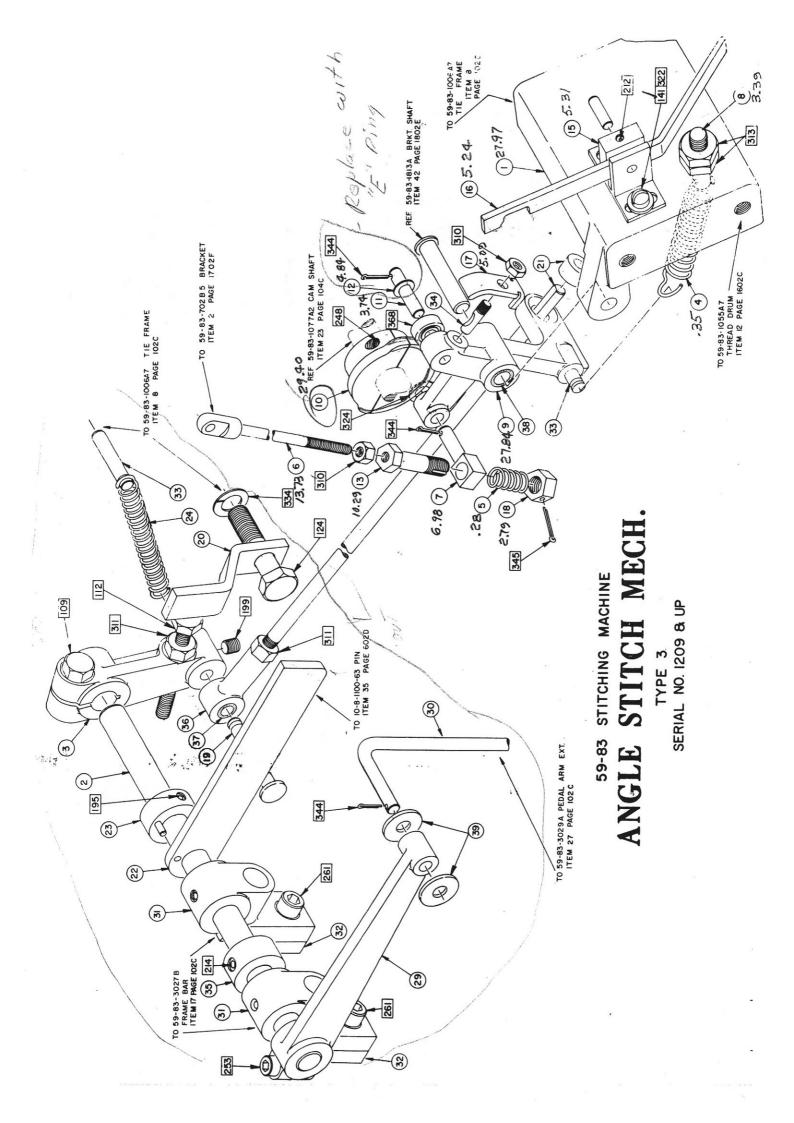



# ANGLE STITCH MECHANISM - TYPE 3 SERIAL NUMBER 1209 & UP

ANGLE STITCH MECHANISM  TYPE 3  SERIAL NUMBER 1209 & UP																				
PART NUMBER	59-83-711E		40.17	39-63-112A	1	59-83-1009D1				59-83-2510DZ	83-2516E1	59-83-3010D1-10	59-83-3010F	10-20-1A-62	10-25-1A1-53	10-45-1A-5	10-56-1AI-53	10-250-1A-5574×	10-250-1A-5876*7	10-40-1100-15
DESCRIPTION	Rod Assembly	lude		Adjuster Arm	Arm Collar	Lever Spring				Pedal Lever	Conn. Rod	Shaft Bracket	Spacer	Spring Post	Clamp Stud		Rod Head		Oilite Bushing	Flat Washer
ITEM NO.	21			22	23	24				29	30	Splace, 31	32	33	34	35	36	37	38	39
PART NUMBER	59-83-110AL	59-83-501F1	1	59-83-503D	59-83-704B3	59-83-704C2	59-83-704D3	59-83-704E	59-83-705A2 -	59-83-705B2	59-83-705C3	-83-705D-	59-83-706A		59-83-706Cl	59-83-706D1	59-83-706E	59-83-706F	59-83-711B	59-83-711C1
DESCRIPTION	Tie Bracket	Control Shaft	Operating Lever	Lever Spring	Rod Spring	Bracket Rod	Pusher Block	Spring Stud	Cam Lever	Plate Cam	Roller Stud	•-	Adi. Bushing		Latch Bearing	Locking Latch	Latch Clip	Bushing Nut	Spring Stud	
ITEM NO.	1	2	3	4		9.	2.	8	6.	.10		12	. 13	)	15	16	17	18	19	20

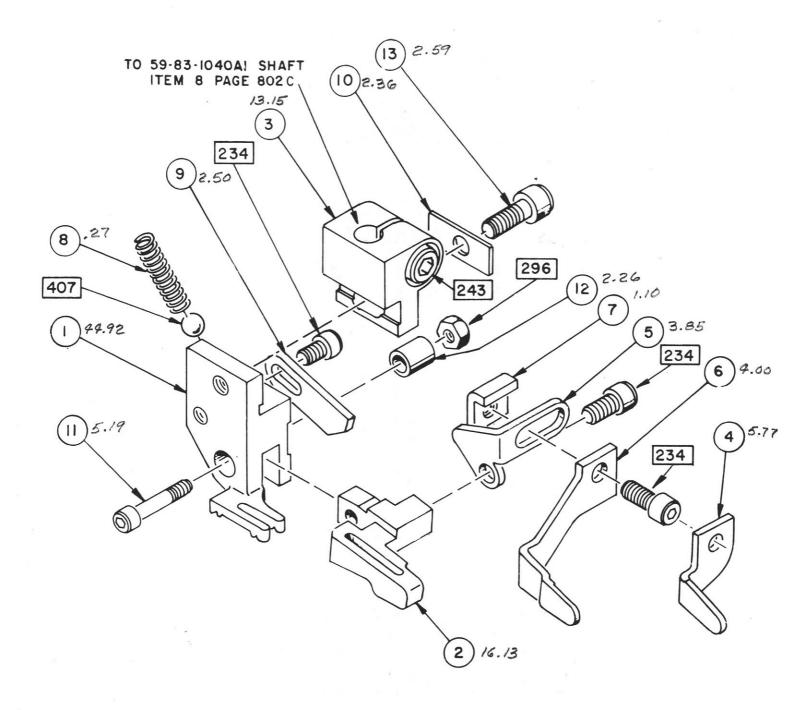

59-83 STITCHING MACHINE

#### PRESSER FOOT & SWIVEL TOE

TYPE 3
SERIAL NO. 368 & UP




### PRESSER FOOT & SWIVEL TOE TYPE 3 SERIAL NUMBER 368 & UP

ITEM NO.	DESCRIPTION	PART NUMBER
1	December 1	50 00 50010
1	Presser Foot	59-83-708A2
2	Swivel Toe	59-83-708B3
3	Toe Holder	59-83-708C
4	Material Guide (straight)	59-83-708D1 .
5	Guide Bracket	59-83-709A ·
6	Material Guide (bent)	59-83-709B2 ·
7	Guide Nut	59-83-709C1 *
8	Plunger Spring	59-83-709E
9	Swivel Toe Stop	59-83-709F -
10	Holder Washer	59-83-710A
11	Hinge Pin (Note 1)	59-83-710B3'·
12	Pin Sleeve (Note 1)	59-83-710C3 ·
13	Cap Screw	59-83-710D ·

NOTE 1: ITEMS 11, 12 & 296 used on Serial 918 & UP.

These ITEMS will be supplied for repairs for Serial 368 to 917 inclusive to replace 71083 & 710C3.

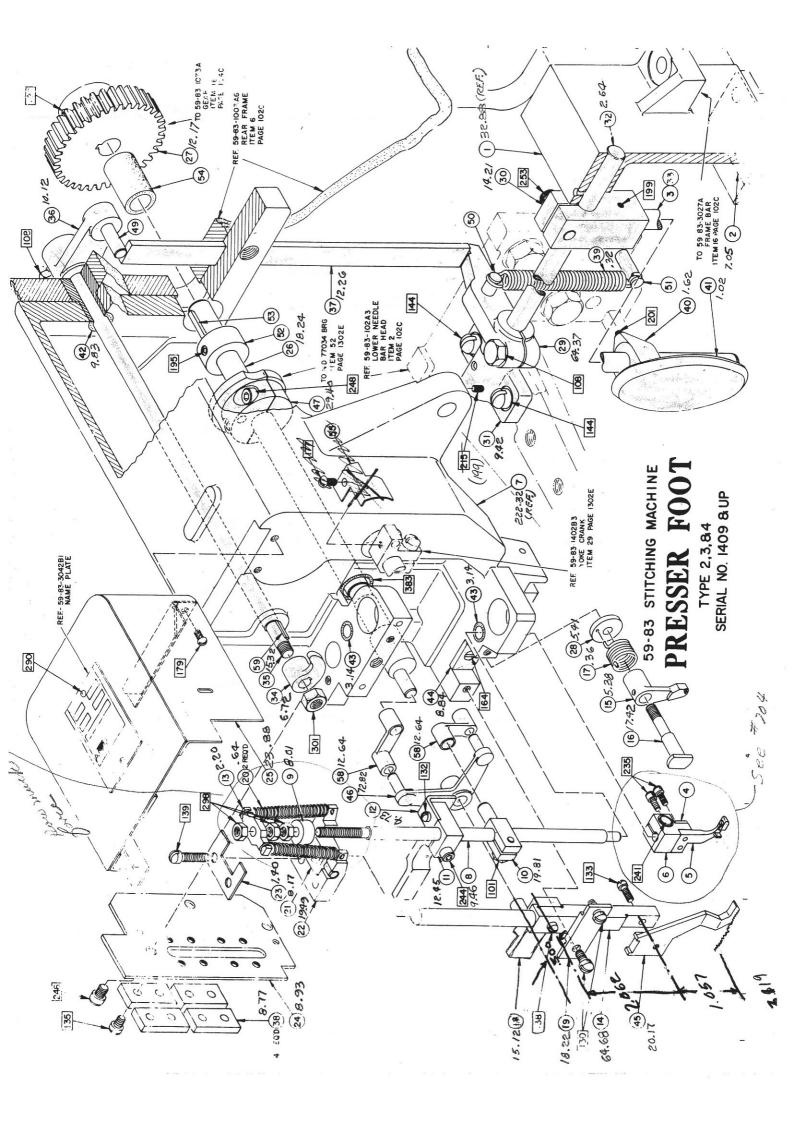

When ordering give complete part number stamped on part

from edge of material.


NOTE #1:

(Example: 59-83-1047D4-12) or order as 59-83-1047D4 Presser Foot and give stitch length desired and distance from edge of material. Items 4,5,% 6 comprise Type 2 & 4 Stationary Presser Foot.



## PRESSER FOOT - TYPE 2,3, & 4 SERIAL NUMBER 1409 & UP


				75° 5°	S	ER	ΙA	T	RES Y PI	E 2	2,		001 & 4		z [	4	į	116x3/8X1	1				ı		
PART NUMBER	59-83-1044D 59-83-1044E2	59-83-1045A1 59-83-1045B	-83	9-83-	59-83-1045E1 59-83-1046B	-83-3032B	9-83-3032C	-83-	-59-83-1047A 59-83-1047B	-83-	-83-	-83-1406A3	10-8-1100-59	-20-1A-62	-20-1A	10-45-1A-4	-1100-	-250-1A-76	58-83-2521E		58_83_105143	#204*	10-32 X 1/2 -	1	
DESCRIPTION	Oper. Shaft	te		Lifter Rod	Stud Guide			<del></del>	Foot Bushing Guide Plate		S	Upper Looper Cam	Dowel	Spring Post		Set Screw Collar		_	Thread Indicator		Link	Woodruff Kev	H		
ITEM NO.	32.	34	36	37	39.	40.	41.	- 42	4 <del>4</del> 3	45.	46	47	. 48 49	50.	51	- 52	53	. 54	- 55		00	59	09	,	
	90			-3	1								1			1				. £			1	>	
PART NUMBER	59-83-101A2 59-83-101E Pay 17 50-83-50101	59-83-800F	-83-	00	59-83-1040A10-110	-83	-83-	200	-83-	-83-1	-83-1	-83-1	59-83-1041E4	-83-	-83-1	-83-	-83-	-83-1	59-83-9590A	-83-1	-83-1	-83-1	59-83-1044A2-10-12/	-83-	-83-
	3-101A2 3-101E	#33) Note #1)·· 59-83-	(Note #1) 59-83-800A7-	r (Note #1) 59-8	00 00	Cap 59-83-	59-83-	59-83-	-83-	59-83-	er 59-83-1	59-83-1	83-	r Strip 59-83-	59-83-	wivel 59-83-	t 59-83-	over 59-83-1	1001	Shaft 59-83-1	Gear 59-83-1	t. Collar 59-83-1	59-83-1044A2-10	-83-	Bearing 59-83-

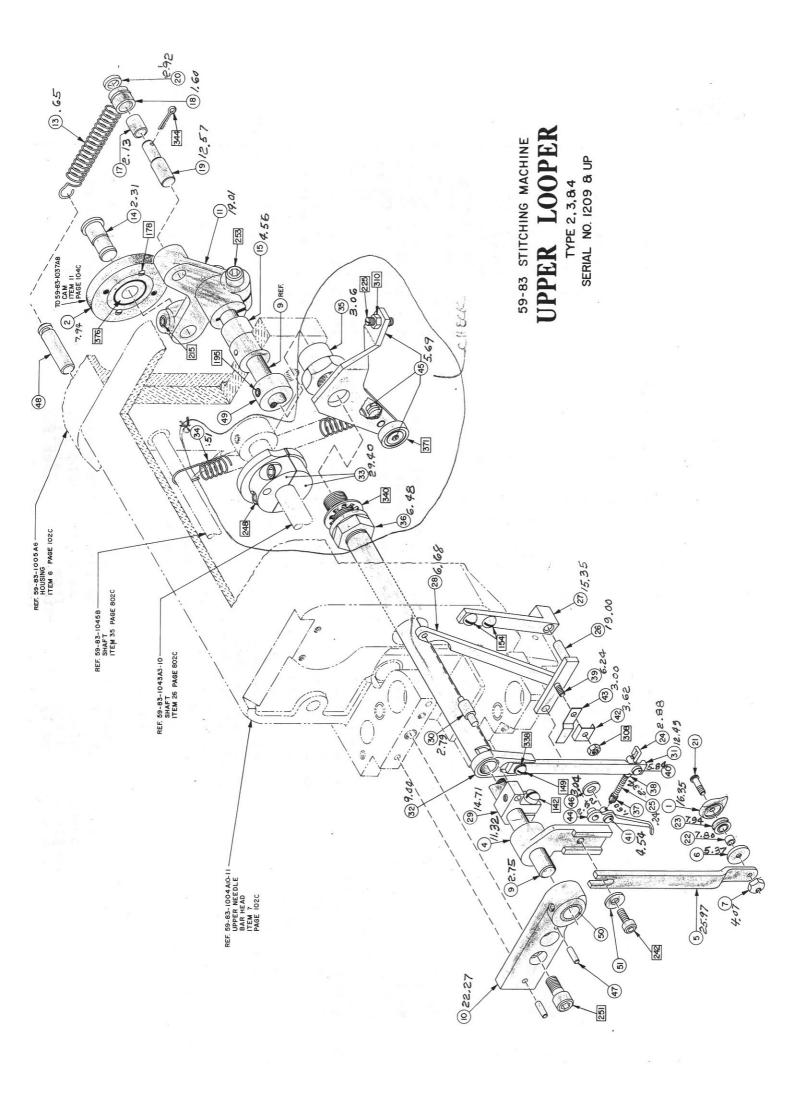



## UPPER LOOPER - TYPE 2, 3,

		2-00		
	Charge	W 3 1 also	PPER LOOPER YPE 2,3,& 4 NUMBER 1209	3 1 3 %
DART NIMRED	9-83 9-83 , ng)	59-83-1406A3 59-83-1406D1 59-83-1406E- 59-83-1407A 59-83-1407B	59-83-1407C 59-83-1407D 59-83-1408B 59-83-1408C 59-83-1408D	59-83-1409C 59-83-1404C 10-8-1100-27 10-20-1A-69 10-45-1A-3 10-250-1A-64 10-40-1100-1
1209 & UP	Rod Arm Sleeve Assembly (includes 1403C3 Retain 1403D2 Sleeve & 1405F	Looper Cam. Lever Spring Locating Nut. Clamp Nut Adj. Nut Rod Collar	Rod Stud  Bearing Stud Rod Support Spring Clip Retaining Spring Finger Assembly (includes 1400A4 Finger	Mbly 1406Bl I 1406Bl I st, 1409B Collar shing
NUMBER 1 ITEM	32	34 5 3 3 4 5 3 4 5 5 5 5 5 5 5 5 5 5 5 5	39 40 41 44 44	45 446 47 48 49 50 50 51
SERIAL NI SERIAR	- <del>-</del> -	59-83-1032C1 59-83-1032D1-10 59-83-1032E	59-83-1035B2 59-83-1035B3 59-83-1036B3 59-83-1036C5 59-83-1036D2 59-83-1036D2	59-83-1037B - P. 59-83-1037B - P. 59-83-1037G - P. 59-83-1037E - P. 59-83-1038C - 59-83-1038C - 59-83-1400B5 - 59-83-1401B2 - 59-83-1402B3 - 59-83-1402B3 - 59-83-1402B3 - 59-83-1402B3 - 59-83-1402B3 - 59-83-1402C2
DESCRIPTION	3.5	acket m att	Arm Shaft Bearing Bracket Cam Lever Lever Spring Cam Roll Stud	Stud Bushing Sleeve Spring Post Sleeve Retainer Knife Stud Stud Spacer Looper Roller Pusher Rod Rod Spring Crank Crank Crank Support Conn. Rod Yoke Crank
ITEM	• 1	4000	10 11 13 14	117 118 118 119 119 119 119 119 119 119 119

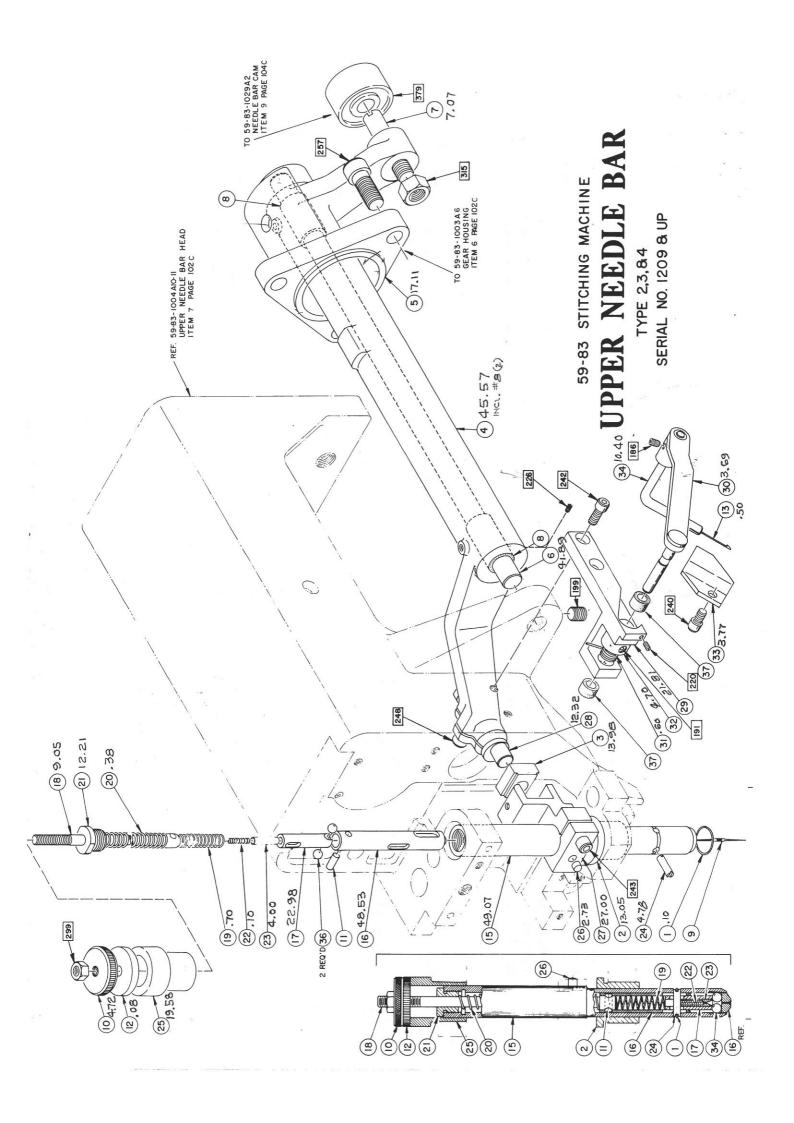




## UPPER NEEDLE BAR - TYPE 2,3, & 4 SERIAL NUMBER 1209 & UP

							NIE GER	-	-	-		yara.	
					UP	PF				DL		BAI	<u>R</u>
			c	ER	TAT	Y I	E	2	, 3 EF	3, { } •1;	209	1 5	& UP
			2	LIL	3	3	3	III	Á	4	202	3	V UP
	atrastic				2	3	ટ		3	જ્ઞ		74	
		m ·	က	2		Till the	430	100	iqu)	NO.		S	
ER	1A 1B	1C	2C 2F	OB	OB OB	OF	1A	1B	1	10	200	1	
<b>B</b>	50	50	50	51	51 52	2520F	2521A	2521B	FEE	52	ia	1A	
PART NUMBER	83-1501A1 83-1501B1	59-83-1501C3 59-83-1501F	59-83-1502C3 59-83-1502F	59-83-1510B2	59-83-1510C   59-83-2520B1	-2	-2	-2	4	83-2521D	11/64 Dia	0-	
F	833	83	83	83	833	83-	59-83-	59-83-	#	83	64	25	
A R'	59-	59- 59-	59-	-6	1 0	29-	9-	9-	7	59-	1/	-0	
D	59 59	2 2	က် က	iO i	က က	5	S	2	Ŋ	2	_	-10-250-1A-50CH6D	
						γ.						Ī	
						Assy							
z					20	A	20	L			11		
10			50	$\overline{}$	ld Bearing	Lever	Spring	Collar	rd		Steel Ball	ng	
PT	50	Q.	in	<u>(a)</u>	e ca	eV	pr	01	Guard	Arm	7	hi	
RI	apin	to	sh	ď	m m	Ĭ		ŭ	G	A	ee	ns	
SC	p C	Sin	Bu	am	St	er	er	er	er	er	St	B	
DESCRIPTION	n 8 S	le	e l	13	Y TO	ad	ad	ad	ad	ad		te	
	ri	ed	70 G	ı	oc	re	re	re	re	re	Ď.	11	
	Spring Cap Stop Spring	Needle Stop Stop Pin	Large Bushing Locating Pin	Bar Clamp	Block Stud Threader B	Threader	Threader	Threader	Threader	Threader	Z	Oilite Bushing	
₩ .										1000			
ITEM NO.	$\frac{21}{22}$	23	25 26	27	28 29	30	31	32	33	34	36	37	
Н					Y	-			1		>	1	
					å	•						٠	
						* 1						7	01
	7	<b>*</b>	460	×. ,		-1032Bl-M*		70.50	-ke-	O)	₹	-1500B6-M	-1500C4-10 -1500D -1500E2
ER	-1025D1 -1026C4	-1026F -1028A4	8B	IA	-1031B -1031C	2B	-1033F	4C	-1034E1	1095F2	-1500A4	)B(	-1500C4 -1500D -1500E2 -1500F2
NUMBER	020	-1026F -1028A	-1028B	-1031A	-1031B -1031C	033	03;	-1034C	03	60	20	200	-1500C -1500D -1500E -1500F
NO	77			-	77	-1	-1	-1	-	-10	7	-	7777
	833	833		83	ထို ထို	83	83	83	83	83	-83	83	833
PART	59-83. 59-83	9-6	59-83	59-83	59-83 59-83	59-	9-	9-1	9-1	6	9-6	- 1	1 1 1 1
P	20	ນິນ	5	5	ດ ດ	5	5	2	2	2	59	59	ည် ကို လို သည်
	•	•			•	:		•		:			• •
	•	•	;		:	•		:		•	:		: :
Z	•	•	<u> </u>		•			•		:	•		: :
10	:	:	$\infty$		:	:		•		e ·	:		. o .
E E	: po	*	em		:	•		:	er	d l	:	ve	. Si
RI	er	00	I t	0	ud g		Ļ	:	sh	ee		ee	ve en g
DESCRIPTION	i n Sh	Bl	S	٠,	Stin	:	Nu	п	Wa	Z	ar	SI	ee xt in ng
DE	ta Bu	8 A	de	0 \	g	:		Pi	4	er	B	ب	S1 E pr
	Re	iner	lu Be	Pi	i n Bu	le	st		ge	ad	le	or	np Slee eve Ext k Sprin Spring
	n al	arck	(includes Item 8)	E	ar	ed	jū	nu	nn	re	ed	dd	am ee ck
	Pin Retainer	Bearing Block	(includes Item 8)	Arm Pivot	Bearing Stud	Needle	Adjust. Nut	Conn. Pin	Plunger Washer	Threader Needle.	Needle Bar	Support Sleeve	Clamp Sleeve Sleeve Extension Lock Spring Bar Spring
M													
ITEM	1 2	ස <b>4</b>	2	9	~ &	6	0	11	2	က	2	9	17 18 19 20
<b>!</b>							_	_	7		7	-	777

due to diameter of needle. When ordering give complete part number (Example: 59-83-1032B1-32) or order as "59-83-1032B1 Needle" and \* "M" or MODEL indicates incomplete part number, part number varies give diameter desired.

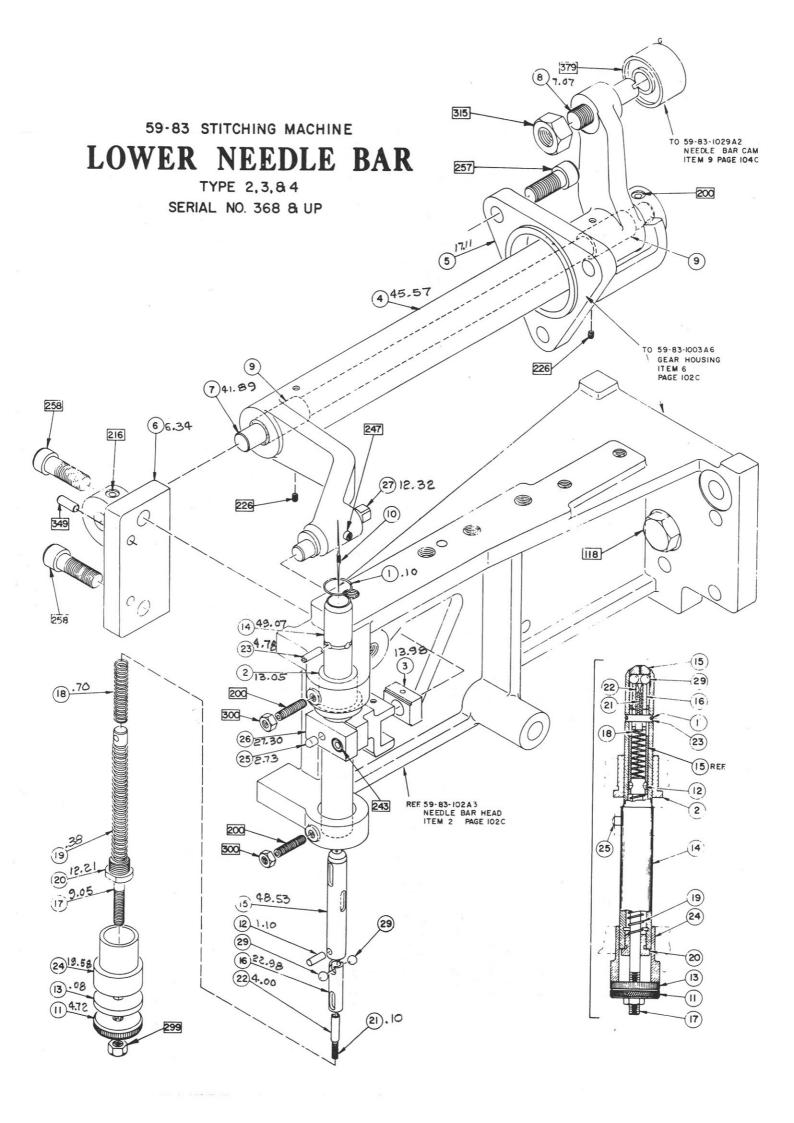




## LOWER NEEDLE BAR TYPE 2,3,& 4 SERIAL NUMBER 368 & UP

T 77.57		
ITEM NO.	DESCRIPTION	PART NUMBER
.1	Pin Retainer	59-83-1025D1
• 2	Small Bushing	59-83-1026C4
· 3	Bearing Block	59-83-1026F
. 4	Rocker Arm	59-83-1028A4
	(includes Item 9)	
• 5	Arm Bearing	59-83-1028B
. 6	Arm Bearing Arm Pivot	59-83-1028C
. 7	Arm Pivot	59-83-1031A1
. 8	Bearing Stud	59-83-1031B
•9	Arm Bushing	59-83-1031C1
10	Needle	59-83-1032B1-M*
.11	Adjusting Nut	59-83-1033F1
. 12	Conn. Pin	59-83-1034C
· 13	Plunger Washer	59-83-1034E1
• 14	Needle Bar	59-83-1500A4
*15	Support Sleeve Clamp Sleeve	59-83-1500B6-M*
•16		59-83-1500C4-10
•17	Sleeve Extension	59-83-1500D
•18	Lock Spring	59-83-1500E2
•19	Bar Spring	59-83-1500F2
* 20	Spring Cap	59-83-1501A1
• 21	Stop Spring	59-83-1501B1
• 22	Needle Stop	59-83-1501C3
• 23	Stop Pin	59-83-1501F
• 2.4	Large Bushing	
• 25	Locating Pin Bar Clamp (L)	59-83-1502F
• 26		
. 27	Block Stud	59-83-1510C
29	N. D. Steel Ball	11/64 Dia.

<sup>\* &</sup>quot;M" or MODEL indicates incomplete part number part varies due to diameter of needle. When ordering give complete part number (Example: 59-83-1032B1-32) or order as "59-83-1032B1 Needle" and give diameter desired.

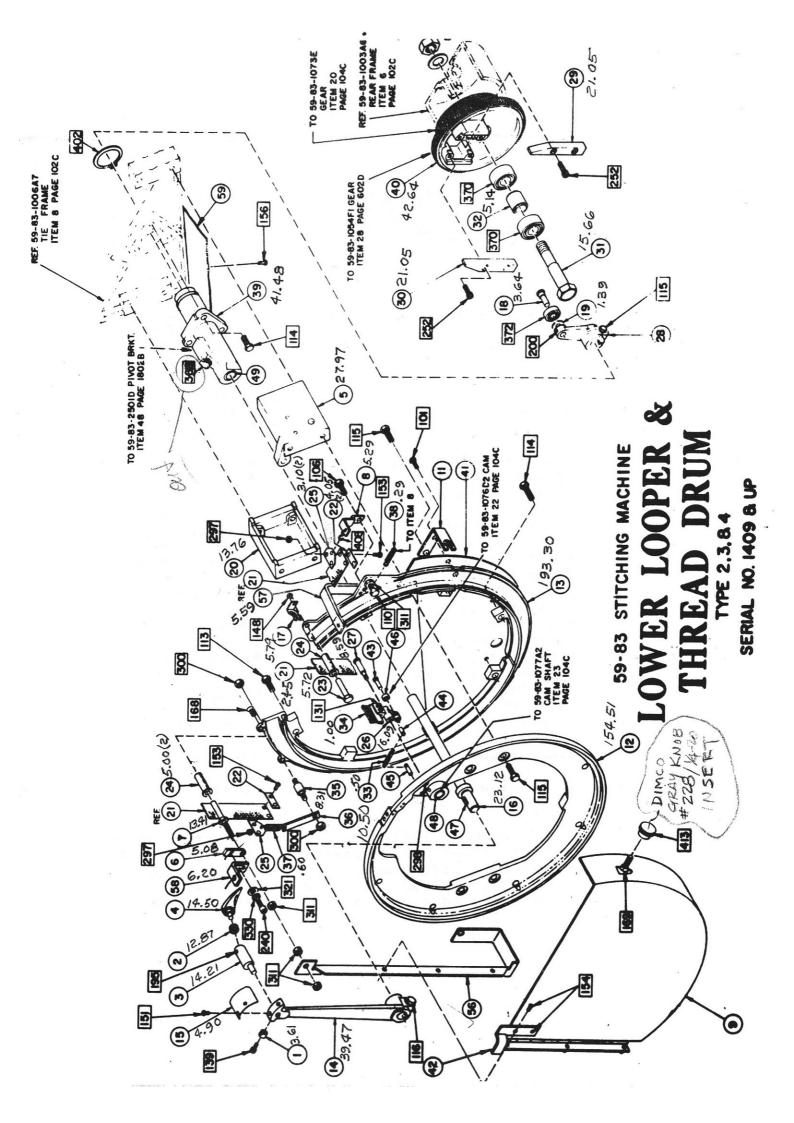




# LOWER LOOPER & THREAD DRUM - TYPE 2,3, & . SERIAL NUMBER 1409 & UP

	L	LOWER LOOPER TYPE 2,	& THREAD DRU	M &	
		SERIAL NUMB	ER 1409 20 UP	New C	
84	2D1 2E 2F 3B 3D	/ 2 2 2	0 0 0 m	7 8 A	
NUMBE	-106 -106 -106 -106	111111	000	-905D V -905E -1090A8	
PART NUMBER		1 1 1 1 1 1 1 1	10-20 10-20 10-49 10-10 10-25	59-83 71) 59-83 71) 59-83 59-83	
ON		ing ing er	. 50 50	(Note	
DESCRIPTION	itud  Spacer Spring .  Brush Stud .	up Spring cener Sprin Searing Gear Drum Cover th Cam Stud	Post Post Rey Bushing	t (F) ( t (R) ( Guard	*
	Gear Stud Bearing Sp Lever Spri Thread Bru Lever Stud Spring Lev		ing Rol Pro ite		
ITEM NO.	Gear Beari Lever Threa Lever Sprin	Take Tigh Arm Driv R.S. Swit	Spr Cam Hi I Oil	Bracke Suppor Suppor	1986
ITE	4 4 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	37 38 38 39 40 40 42 42 43 43	****	56 57 58 58	100
·		Ž.	17 45 - Ch 42 41 83 83 2-030	1	
T NUMBER	78-66A 78-68B1 78-69B1	83-110A1 83-905A2 83-905B1 83-905C1 83-906A2	83-907C1 83-1055A7 83-1056A5 83-1057A2 83-1058A1 83-1058B3	-1058E1 -1058F -1059E1 -1060A4 -1060F -1061B	-1061D -1061E1 -1062A1 -1062B
PART	59-78 59-78 59-78	20 20 20 20 20 20 20 20 20 20 20 20 20 2	500 - 833 - 834 - 835 -	x = x = x = x = x = x = x = x = x = x =	18 33 33 38 38 38 38 38 38 38 38 38 38 38
		Hinge	: : : :		: : :
PTION		~ × × × × ×		(R) :: :: :: :: :: :: :: :: :: :: :: :: ::	
DESCRIPTION	Spacer Extension r Hook Ass udes A68-E	Bracket ( e Support ey Stud ( tener Arm r Assembl ludes 907	Clip  d Drum  d Separator  r Arm  Support	o o	Fastener sver Stud ank Gib (R)
	K K K K K K K K K K K K K K K K K K K	Br le ley hte er er clu	Cl d d d Su Su	Bearing Stu Stud Washer Tie Bracket Thread Belt Clamp Strip Pulley Stud	> 0 4 9 9
ITEM NO.		HHHHOO			
ITE	4 ·			200 200 200 200 200 200 200 200 200 200	300876

Note #1 - First used on Serial #1259 & UP

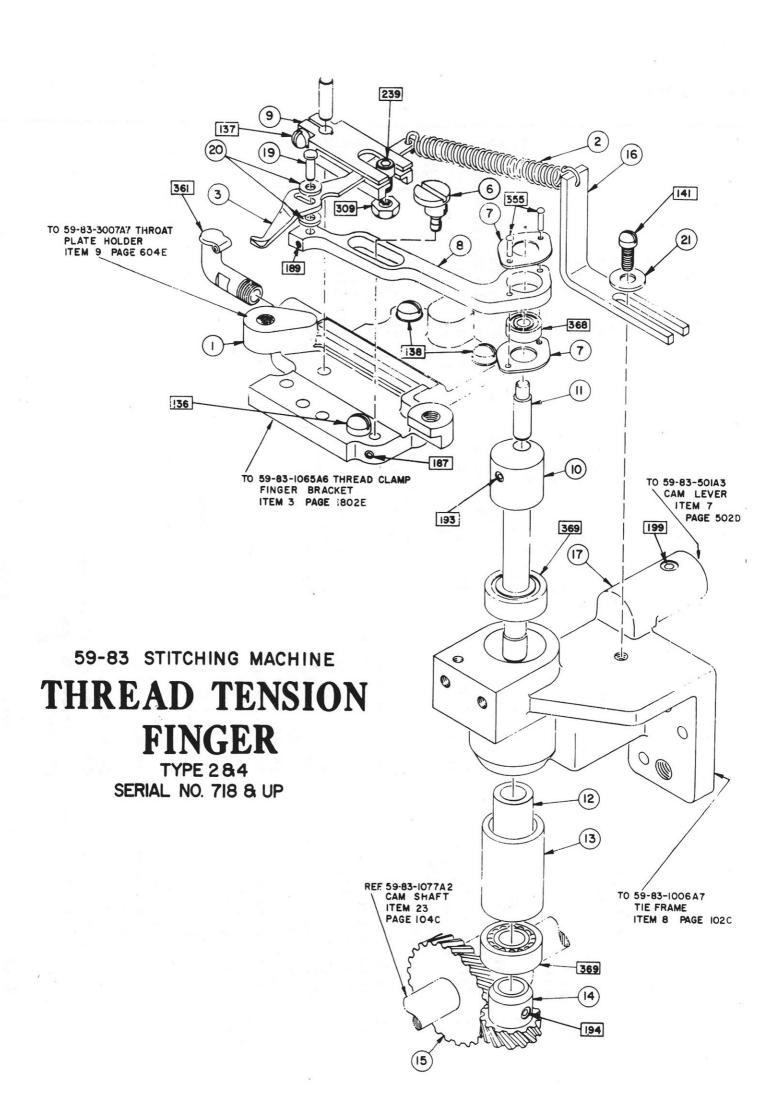




## THREAD TENSION FINGER TYPE 2 & 4 SERIAL NO. 718 & UP

ITEM		
NO.	DESCRIPTION	PART NUMBER
1	Bracket Cover	59-83-1064B-10#
2	Finger Spring	59-83-1069B-10
3	Tension Finger (See Note #1)	59-83-1700A6
6	Support Roller	59-83-1700F1
7	Bearing Retainer	59-83-1701D1/
8	Slide Support	59-83-1701F2
9	Support Block	59-83-1702A1
10	Eccentric Shaft	59-83-1702D4
11	Support Stud	59-83-1702F2
12	Bearing Spacer	59-83-1703A
13	Brg. Stop Bushing	59-83-1703B
14	Driven Gear	59-83-1703C
15	Drive Gear	59-83-1703D
16	Stud Holder	59-83-1703F1
17	Bearing Bracket	59-83-1704A4
19	Plain Stud	10-1-1A-51
20	Plain Washer	10-40-1100-11
21	Plain Washer	10-40-1100-14

### Note:


#1 - 1700A6 replaces 1700A5 Tension Finger and 10-6-1A1-51 Roller Stud.

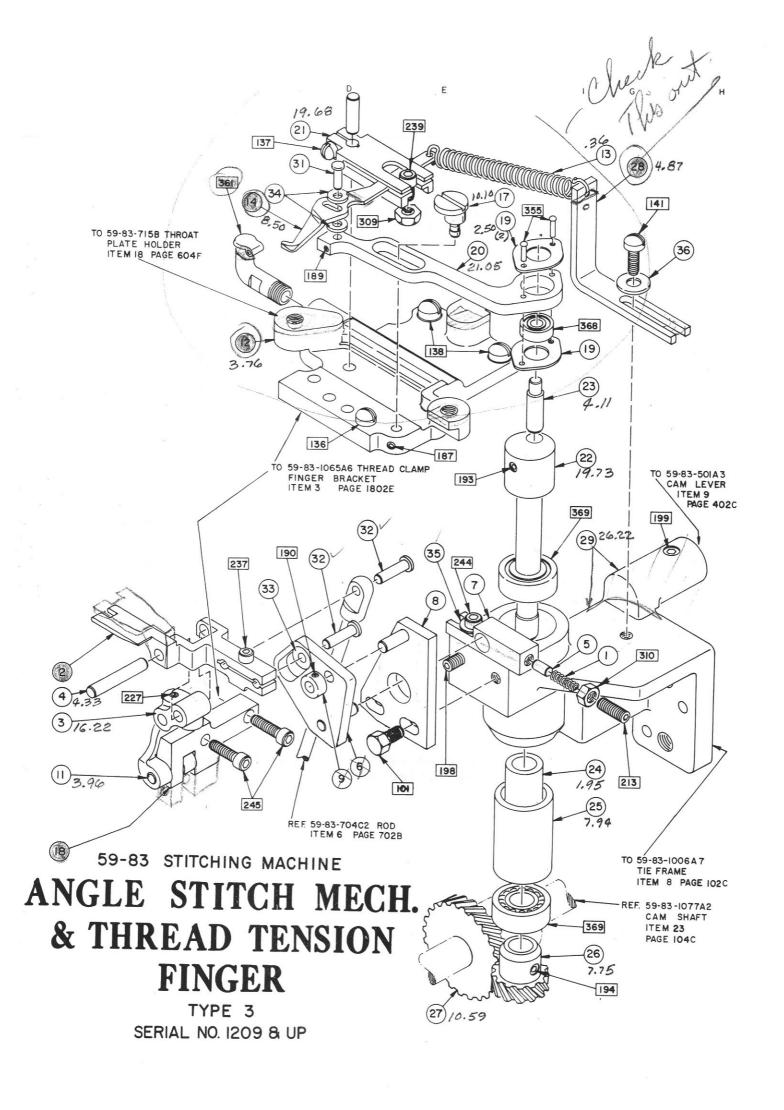



## ANGLE STITCH MECHANISM & THREAD TENSION FINGER TYPE 3 SERIAL NUMBER 1209 & UP

ITEM		100
NO.	DESCRIPTION	PART NUMBER
1 2 3 4 5 6 7 8	Cam Spring Oscillating Bracket Pivot Arm Bracket Pin Tension Plunger Pusher Cam Lever Tension Adjuster Plate Assembly (includes 703B3 Plate & 703E Rivet) Rod Collar	59-83-700F2 59-83-702B5 - NEW 59-83-702C3 59-83-702D2 59-83-703A2 - NEW 59-83-703D2 59-83-703F - HEW 59-83-704F
11 12	Lower Finger Bracket Cover	59-83-707B1-14 59-83-1064B-11/-Ch9
13 14	Finger Spring Tension Finger	59-83-1069B-10 = 59-83-1700A6 - Chg.
17 18 19 20 21 22 23 24 25 26 27 28 29	Support Roller Support Bearing Bearing Retainer Slide Support Support Block Eccentric Shaft Support Stud Bearing Spacer Brg. Stop Bushing Driven Gear Drive Gear Stud Holder Bearing Bracket	59-83-1700F1 59-83-1701C3 - NEW 59-83-1701D1 59-83-1701F2 59-83-1702A1 59-83-1702D4 59-83-1702F2 59-83-1703B 59-83-1703C 59-83-1703D 59-83-1703F1 59-83-1704A4
31 32 33 34 35 36	Plain Stud Cam Roller Stud Cam Roller Plain Washer Plain Washer Plain Washer	10-1-1A-51 10-6-1A1-51 10-49-1A1-3 10-40-1100-11 10-40-1100-13 10-40-1100-14

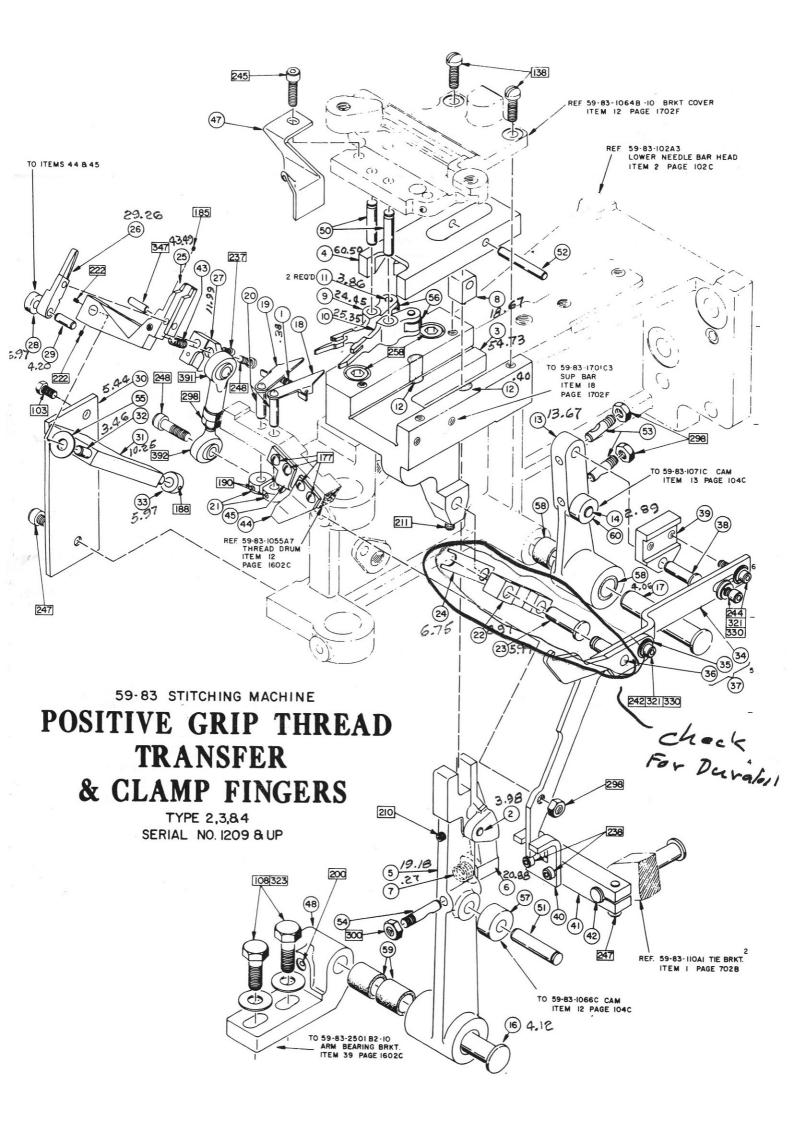



## POSITIVE GRIP THREAD TRANSFER & CLAMP FINGERS TYPE 2, 3, & 4 SERIAL NO. 1209 & UP

ITEM		ITEM		
NO.	DESCRIPTION PART NUMBER	NO.	DESCRIPTION PART NUMBE	
1	Finger Spring59-83-1046C1	(34)	Lifter Hook59-83-1811D	
2	Piece Pin59-83-1064A	35	Hook Link59-83-1811E	
3	Finger Bracket59-83-1065A6	36	Hook Stud59-83-1811F	
4	Cam Slide59-83-1065C2	37	Hook Assembly59-83-1812A	
5	Cam Lever59-83-1065D.		(Consists of Items 34,35, § 36	
6	Spring Piece59-83-1065E1	38	Lever Stud59-83-1812B	
7	Compression Spring59-83-1065F	39	Adj. Block59-83-1812C	
8	Pivot Block59-83-1066A	40	Support Bkt59-83-1812E	
9	Clamp Finger (Rear) 59-83-1066E7	41	Bkt. Arm59-83-1812F	
10	Clamp Finger (Front) 59-83-1066F7	42	Bkt. Shaft59-83-1813A	
11	Roller Pin59-83-1069F		(For Type 4 Machine use	
12	Wick Oiler59-83-1070E		59-83-31641-030)	
13	Cam Lever59-83-1071D1	43	Clamp Spring59-83-1813B	
14	Cam Roll Pin59-83-1074A	44	Opener Cam (L)59-83-1813C	
		45	Opener Cam (U)59-83-1813D	
16	Lever Stud59-83-1105F1		· poner cam (e)	
17	Lever Stud59-83-1106B1	47	Support & Guard59-83-1900A;	
18	Support Finger (F)59-83-1110A3	48	Pivot Bracket59-83-2501D]	
19	Support Finger (R)59-83-1110B3		2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2	
20	Finger Stud59-83-1110D	50	Roll Pin10-7-1A1-59	
. 21	Finger Collar59-83-1112A	51	Roll Pin10-7-1A1-71	
-22	Lifter Lever59-83-1801B2	52	Dowel10-8-1100-42	
-23	Lever Stud59-83-1801D2		Clamp Stud10-25-1A1-51	
	Stud Clip 50 83 1801E1	54	Clamp Stud10-25-1A1-53	
		55	Washer10-40-1100-114	
	Clamp59-83-1810B1		Cam Roller10-49-1A1-3	
27	The state of the s	57	Cam Roller10-49-1A1-7	
	Roller59-83-1810D	58	Oilite Bushing 10-250-1A-63%	
	Roller Pin59-83-1810E1 .	59	Oilite Bushing 10-250-1A-6436x	
30		60	Cam Roller 10-49-1A1-5	
	Swivel Bkt59-83-1811A			
	Swivel Pin59-83-1811B			
33	Pin Collar59-83-1811C			



TOTAL	*	
NO.	DESCRIPTION	PART NUMBER
101 102 103 104 105 106 107 108 109 110 111 112 113 114 115 116 117 118 119 120 121 122 123 124	Hex. Hd. Screw	#10-32 x 3/8 #10-32 x 7/16 #10-32 x 1/2 #10-32 x 5/8 #10-32 x 3/4 1/4-20 x 1/2 1/4-20 x 5/8 1/4-20 x 3/4 1/4-20 x 1 1/4-20 x 1 1/4-20 x 2 1/4-20 x 3 1/4-2
130 131 132 133 134 135 136 137 138 139 140 141	Fillister Hd. Screw	#5-40 x \(\frac{1}{4}\) #5-40 x 3/8 #6-40 x \(\frac{1}{4}\) #6-40 x 5/16 #6-40 x 7/16 #8-32 x 3/16 #8-32 x 5/16 #8-32 x 3/8 #8-32 x \(\frac{1}{2}\) #8-32 x 5/8 #8-32 x 1\(\frac{1}{4}\) #10-32 x 3/8 #10-32 x \(\frac{1}{2}\)



ITEM NO.	DESCRIPTION	PART NUMBER
143 144	Fillister Hd. Screw Fillister Hd. Screw	$1/4-20 \times \frac{1}{2}$ $1/4-20 \times 5/8$
148 149 150 151 152 153 154 155 156 157	Round Hd. Screw	#5-40 x 1 #6-40 x 3/8 #6-40 x 3/8 #8-32 x 1 #8-32 x 5/16 #8-32 x 3/8 #8-32 x 2 #10-32 x 5/8 #10-32 x 3/8 1/4-20x 1
167	Flat Hd. Screw	#5-40 x 3/16 #5-40 x 3/16 #5-40 x 1/4 #5-40 x 5/16 #5-40 x 3/8 #8-32 x 1/4 #8-32 x 5/8 #10-32 x 1/2 1/4-20 x 3/8 1/4-20 x 3/4
173 174	Pan Hd. Screw Pan Hd. Screw	#8-32 x 3/8 #10-32 x $\frac{1}{2}$
177 178 179 180 181	Truss Hd. Screw	#5-40 x \(\frac{1}{4}\) #6-32 x 5/16 #8-32 x \(\frac{1}{4}\) #10-32 x \(\frac{1}{4}\) #10-32 x 5/8



ITEM NO.	DESCRIPTION	
	DESCRIPTION	PART NUMBER
185 186 187 188 189 190 191 192 193 194 195 196 197 198 199 200 201 202 203 204	Hex. Soc. Cup Pt. Set Screw	#3-48 x 1/8 #5-40 x 1/8 #5-40 x 3/16 #6-40 x 3/16 #8-32 x 1/8 #8-32 x 3/16 #8-32 x 3/16 #8-32 x 3/16 #8-32 x 3/8 #10-32 x 3/16 #10-32 x 3/16 #10-32 x 3/8 #10-32 x 3/8
209 210 211 212 213 214 215 216 217	Hex. Soc. Oval Pt. Set Screw	#5-40 x 4 #8-32 x 3/8 #10-32 x 4 #10-32 x 5/16 #10-32 x 4 1/4-20 x 4 1/4-20 x 5/16 1/4-20 x 3/8 3/8-16 x 3/8
220 221 222 223 224 225 226	NYLOCK Oval Pt. Set Screw NYLOCK Oval Pt. Set Screw Hex. \soc. Flat Pt. Set Screw Hex. Soc. Full Dog Set Screw Cone Headless Set Screw Oval Headless Set Screw Unbrako NYLOCK Hex. Soc. Set Screw	#3-48 x 3/16 1/4-20 x 2½ #6-40 x 3/16 1/4-20 x 5/8 #8-32 x ½ #10-32 x 5/8 #6-32 x ½



ITEM NO.	DESCRIPTION	PART NUMBER
227	Unbrako Self-Locking Knurled Cup Pt. Set Scr.	$\#6-40 \times \frac{1}{4}$
228	Sq. Oval Pt. Set Screw	$1/4-20 \times 2\frac{1}{2}$
		-
234	Hex. Soc. Hd. Cap Screw	$#5-40 \times \frac{1}{4}$
235	Hex. Soc. Hd. Cap Screw	$#5-40 \times 5/16$
236	Hex. Soc. Hd. Cap Screw	$\#6-40 \times \frac{1}{4}$
237	Hex. Soc. Hd. Cap Screw	$\#6-40 \times 3/8$
238	Hex. Soc. Hd. Cap Screw	$\#6-40 \times \frac{1}{2}$
239	Hex. Soc. Hd. Cap Screw	$\#8-32 \times 3/16$
240	Hex. Soc. Hd. Cap Screw	$\#8-32 \times \frac{1}{4}$
241 242	Hex. Soc. Hd. Cap Screw	#8-32 x 5/16
242	Hex. Soc. Hd. Cup Screw	$\#8-32 \times 3/8$
243	Hex. Soc. Hd. Cap Screw	$\#8-32 \times 7/16$
245	Hex. Soc. Hd. Cap Screw	$\#8-32 \times \frac{1}{2}$
246	Hex. Soc. Hd. Cap Screw Hex. Soc. Hd. Cap Screw	#8-32 x 5/8
247	Hex. Soc. Hd. Cap Screw	#10-32 x 3/8
248	Hex. Soc. Hd. Cap Screw	#10-32 x $\frac{1}{2}$
249	Hex. Soc. Hd. Cap Screw	#10-32 x 5/8
250	Hex. Soc. Hd. Cap Screw	$\#10-32 \times 3/4$
251	Hex. Soc. Hd. Cap Screw	$1/4-20 \times 3/8$
252	Hex. Soc. Hd. Cap Screw	$1/4-20 \times \frac{1}{2}$ $1/4-20 \times 5/8$
253	Hex. Soc. Hd. Cap Screw.	$1/4-20 \times 3/8$ $1/4-20 \times 3/4$
254	Hex. Soc. Hd. Cap Screw	$1/4-20 \times 3/4$ $1/4-20 \times 7/8$
255	Hex. Soc. Hd. Cap Screw	$1/4-20 \times 1/8$ $1/4-20 \times 1\frac{1}{4}$
256	Hex. Soc. Hd. Cap Screw	$5/16-18 \times 5/8$
257	Hex. Soc. Hd. Cap Screw	$5/16-18 \times 3/8$ $5/16-18 \times 3/4$
258	Hex. Soc. Hd. Cap Screw	$5/16-18 \times 7/8$
259	Hex. Soc. Hd. Cap Screw	5/16-18 x 1
260	Hex: Soc. Hd. Cap Screw	$5/16-18 \times 1\frac{1}{4}$
261	Hex. Soc. Hd. Cap Screw	$5/16-18 \times 1\frac{1}{2}$
262	Hex. Soc. Hd. Cap Screw	$3/8-16 \times 3/4$
263	Hex. Soc. Hd. Cap Screw	$3/8-16 \times 7/8$
264	Hex. Soc. Hd. Cap Screw	$3/8-16 \times 1$
265	Hex. Soc. Hd. Cap Screw	3/8-16 x 1 1/8
266	Hex. Soc. Hd. Cap Screw	$3/8-16 \times 1\frac{1}{2}$
267	Hex. Soc. Hd. Cap Screw	$3/8-16 \times 2\frac{1}{4}$



ITEM		
NO.	DESCRIPTION	PART NUMBER
	DESCRIPTION	PARI NUMBER
272 273 274 275 276 277 278 279 280 281 282	Hex. Soc. Button Hd. Screw Hex. Soc. Flat Hd. Screw	#10-32 x 1/2 #10-32 x 5/8 1/4-20 x 1/2 5/16-18 x 3/4 5/16-18 x 3/8 3/8 -16 x 1" 3/8 -16 x 1-1/4 #5-40 x 1/4 #10-32 x 1/2 #10-32 x 5/8
284 285 286 287 288 289 290 291 292 293 294	ASA Std. Lock Screw Rd. Hd. Wood Screw Slotted Hex. Hd. Screw Sq. Hd. Screw Pan Hd. Wood Screw Round Hd. Wood Screw Parker Drive Screw Weld Screw Step Bolt Thumb Screw with Shoulder Flat Hd. Wood Screw	#10-32 x 3/4  #1A #10 x 1 #10-32 x 1-1/2 1/4-20 x 3-1/2 #10 x 3/4 #10 x 7/8 #2 x 1/8 #HW2720 3/8-16 x 2-3/4 1/4-20 x 1 #8 x 1
296 297 298 299 300 301 302 303 304	Hex Nut Hex Nut Hex Nut Hex Nut (S.S.) Hex Nut	#4-48 #8-32 #10-32 #10-32 1/4-20 1/4-28 1/4-28 (L.H.) 5/16-18 3/8-16



ITEM NO.

DESCRIPTION

PART NUMBER

308 309 310 311 312 313 314 315 316 317 318	Hex. Locknut Hex. Locknut Hex. Locknut Hex. Locknut Hex. Locknut Hex. Locknut ESNA Locknut Gripco Weld Nut Nylock Locknut ESNA Locknut ESNA Locknut	#5-40 #8-32 #10-32 1/4-20 1/4-20 (L.H.) 5/16-18 3/8 -16 #29 NTE-54 #C-148 1/4-20 #21 NTE-058
320 321 322 323 324 325	Flat Washer	# 5 # 8 # 10 1/4 5/16 3/8
329 330 331 332 333 334	Spring Lockwasher	# 5 # 8 # 10 1 / 4 5 / 16 3 / 8
338 339 340	Shakeproof Lockwasher Shakeproof Lockwasher Shakeproof Lockwasher	#1206 #1210 #1224
344 345	Cotter Pin Cotter Pin	1/16 x 1/2 1/16 x 3/4



ITEM NO.	DESCRIPTION	PART NUMBER
346 347 348 349 350	Taper Pin Hardened Dowel Round Hd. Grooved Drive Stud Dowel Pin Drive Lok Pin	#1 x 1 1/8 Dia. x 1/2 Lg #16 x 1/2 3/16 x 7/8 1/4 Dia. x 7/8
353 354 355	Button Hd. Rivet Button Hd. Rivet Round Hd. Iron Rivet	3/32 x 9/32 3/32 x 1/2 1/16 x 5/16
359 360 361 362 363	Gits Oil Cup	#B103 #B104 #L1204 #GB521 #GB522
368 369 370 371 372		#77R3 #7038 #7503 #77034 #77039
375 376	Nice Ball Bearing Nice Ball Bearing	#1602DC #1614DS
379	Fafnir Ball Bearing	#39KTT
382 383 384 385	Oilite Bearing Oilite Bearing Oilite Bearing Oilite Bearing	#A-401-2 #A-620 #T-1102-2 #T-2101-1
388	Thrust Bearing	#603-1/4



ITEM NO.	DESCRIPTION	PART NUMBER	
391	Heim Rod End Bearing	#HF-3	
392	Heim Rod End Bearing	#HM-3	
393	Heim Rod End Bearing	#HF-4	
394	Heim Rod End Bearing	#HFL-4	
400	Waldes Truarc Ret. Ring	#NAS51-137	
401	Waldes Truarc Ret. Ring	#5100-25	
402	Waldes Truarc Ret. Ring	#5100-150	
407 408 409 410 411 412 413	Steel Ball Corkin Screw Co. "S" Hook (Steel or Brass) Tourex Ball Joint Vlier Spring Plunger Vlier Ball Plunger Stanley Table Leg Brace Dimco-Gray Knob	5/32 Dia. #6 #C-106 #S-56 #BL-54N #446-1/4 L. H.	